CoreIDRAW

Overview

CorelDRAW is used to control the Versalaser.

Invoking

Start CorelDRAW via the RemoteApp icon on the CNF Windows workstations.

CorelDraw will not work properly when accessed from Linux – if still necessary, CNF Computing can help you to run CorelDraw on a remote Windows desktop via Linux. For remote access, we recommend subscribing to the CNF Virtual CAD Room service.

Templates

Four templates are available to assist with using CorelDRAW and the Versalaser. The templates are located on the remote machine in a toplevel folder named "CNF" on the C: drive: c:\cnf_.

File Formats

Please see this document on Corel's website for a list of supported file formats in CorelDraw X6.