# ANSYS 11 - Crank Step 2


**Problem Specification** 

- 1. Start-up and preliminary set-up
- 2. Specify element type and constants
- 3. Specify material properties
- 4. Specify geometry
- 5. Mesh geometry
- 6. Specify boundary conditions
- 7. Solve!
- 8. Postprocess the results
- 9. Validate the results

## Step 2: Specify element type and constants

### **Specify Element Type**

We next select the appropriate element type(s) for our problem from a large list of about 200 candidates. Consider this as equivalent to rifling through a sizable toolchest, picking out one or more tools and placing them on a table for later use (in step 5, in our case). To see which element types are appropriate for this problem, bring up the pictorial summary of element types: **Utility menu > Help > Help Topics**. Search for "pictorial summary" and double-click on the search result titled **3.2 Pictorial Summary**. Click on the link to **SOLID Elements**. These are the element types you can use to mesh a solid volume. Check out the **Solid45** element type. It is a brick-shaped element of the type referred to as "hexahedral" or "hex". It has a node at each corner and each node has three degrees of freedom: displacement in the *x*, *y* and *z* directions.

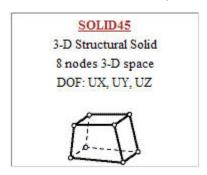


Click on the *SOLID45* link in the pictorial summary. This takes you to the help page for this element. Read through the juicy information at the beginning of this help page. Note that there are no real constants to be defined in our case. Click on *SOLID45* in the statement "See SOLID45 in the Theory Reference for ANSYS and ANSYS Workbench for more details about this element" which appears near the top of the help page. Click on *Equation 12-188*. This shows you the shape function for the element i.e. the equation used to determine the displacement at a general point within the element from the displacement values at the 8 nodes.

We will create our volume mesh in two steps:

- 1. Mesh the front surfaces of the crank as well as the pedal shaft.
- 2. Extrude these surface meshes to get the corresponding volume meshes.

This is analogous to creating a sketch and then extruding while making a solid in a CAD package. Since we cannot mesh *surfaces* with *SOLID45*, we need an additional element type called *MESH200*. Go back to the pictorial summary of element types. Scroll to the top of the page and click on the link to *MESH Elements*. This takes you to the *MESH200* element type.

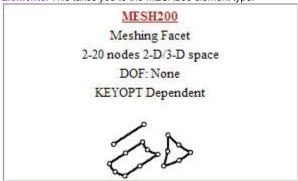

Click on the MESH200 link in the pictorial summary to see the help page for this element. You see the following information:

"MESH200 is a "mesh-only" element, contributing nothing to the solution. This element can be used for the following types of operations:

 Multistep meshing operations, such as extrusion, that require a lower dimensionality mesh be used for the creation of a higher dimensionality mesh" In our case, meshing the two front surfaces with MESH200 elements can be thought as going to these surfaces and marking out points and lines with a pen to show ANSYS where to put the corresponding SOLID45 nodes and element faces. The SOLID45 nodes and elements are actually placed at these pre-marked locations in the extrusion step. In effect, MESH200 provides greater control over the mesh without actually contributing to the solution.

Referring to Figure 200.1 in the *MESH200* help page, we see that this element type comes in 12 different flavors. For our purposes, we will be using the 3-D quadrilateral with 4 nodes option since this corresponds to an element face of *SOLID45*. The help page indicates that this option is selected by setting *KEYOPT*(1) = 6. Note that there are no real constants to be defined for *MESH200*.

Minimize the ANSYS Help window. Select

#### Main Menu > Preprocessor> Element Type > Add/Edit/Delete > Add...

Pick Structural Mass Solid in the left field and Brick 8node 45 in the right field. Click Apply to select this element.



Scroll down the left field, pick Not Solved in this field and then Mesh Facet 200 in the right field. Click OK to select this element.



The Element Types window should list two types of elements: MESH200 and SOLID45.



In order to set the 3-D quadrilateral with 4 nodes option for MESH200, click on MESH200 and then Options ... in the above menu. Then, select QUAD 4-NODE next to Element shape and # of nodes K1. Click OK.



Close the Element Types menu.

# **Specify Element Constants**

There are no real constants to be set for either element type as noted above.

## Save your work

Toolbar > SAVE\_DB

Go to Step 3: Specify material properties

See and rate the complete Learning Module

Go to all ANSYS Learning Modules