

ANSYS 12 - Crank

- This tutorial is no longer updated. Use the new bike crank tutorial instead.
 - Problem Specification
 - Step 1: Pre-Analysis & Start-Up
 - Start ANSYS Workbench
 - Select Analysis Systems
 - Specify Material Properties
 - Step 2: Geometry
 - Creating a Sketch
 - Step 3: Mesh
 - Step 4: Setup (Physics)
 - Fixed Support
 - Force on Shaft
 - Step 5: Solution
 - Step 6: Results
 - Total Deformation
 - Von Mises Stress
 - Step 7: Verification & Validation
 - Simple Checks
 - Refine Mesh

Author: Rajesh Bhaskaran & Yong Sheng Khoo, Cornell University


Problem Specification

1. Pre-Analysis & Start-Up
2. Geometry
3. Mesh
4. Setup (Physics)
5. Solution
6. Results
7. Verification & Validation

 This tutorial is no longer updated. Use the [new bike crank tutorial](#) instead.


Problem Specification

A preeminent bicycle company is disappointed with the negative feedback they have received on their latest model, and they have pinpointed the problem to an outdated bicycle crank design that they assumed would still withstand typical loads. To protect their reputation, they have outsourced the task of analyzing the crank to you, providing you with the geometry of the bicycle crank and attached pedal shaft shown below. The dimensions are given in inches. The material they selected has an Young's modulus $E = 2.8 \times 10^7$ psi and Poisson ratio $\nu = 0.3$.

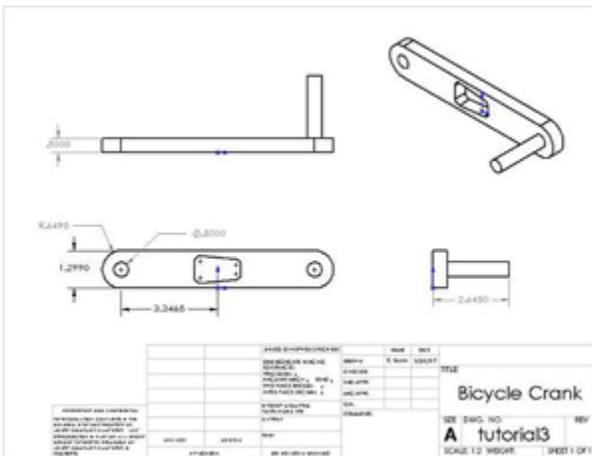

[Higher Resolution Image](#)

Using ANSYS, determine the mechanical response due to a load of 100 lbf applied vertically downward at the end of the pedal shaft as shown in the figure below. Assume that the crank is attached rigidly to a fixed shaft fitted into the hole near the left end of the crank. This means you can constrain the surface of the left hole in X, Y and Z directions as indicated below.

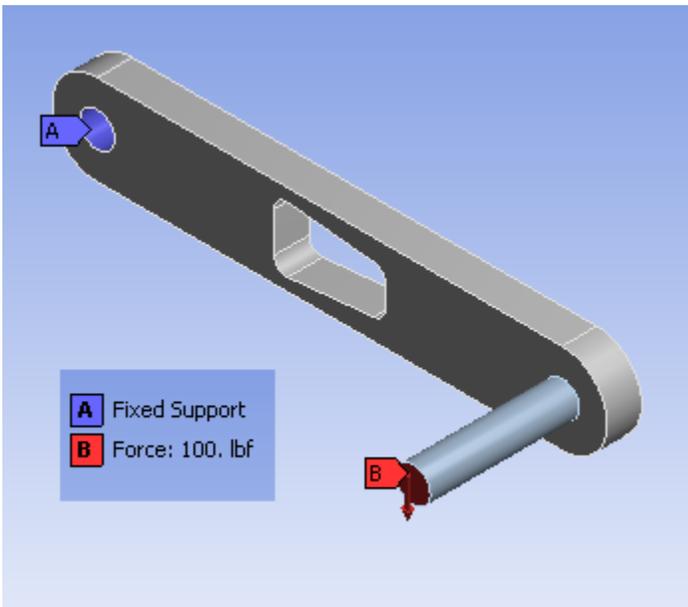

Calculate the deflection, strain and stress distributions in the crank/pedal shaft combination for this loading condition. Use the ANSYS results to evaluate the degree of stress concentration in the vicinity of the cut-out in the crank geometry.

[Go to Step 1: Pre-Analysis & Start-Up](#)

[See and rate the complete Learning Module](#)

[Go to all ANSYS Learning Modules](#)

Author: Rajesh Bhaskaran & Yong Sheng Khoo, Cornell University

Problem Specification

- [1. Pre-Analysis & Start-Up](#)
- [2. Geometry](#)
- [3. Mesh](#)
- [4. Setup \(Physics\)](#)
- [5. Solution](#)
- [6. Results](#)
- [7. Verification & Validation](#)

Step 1: Pre-Analysis & Start-Up


From the problem statement, we know that we are solving static structural problem.

Start ANSYS Workbench

With the new release of ANSYS 12, there have been a lot of improvement in term of overall flow. We start our simulation by first starting the ANSYS workbench.

Start > All Programs > ANSYS 12.0 > Workbench


Following figure shows the workbench window.

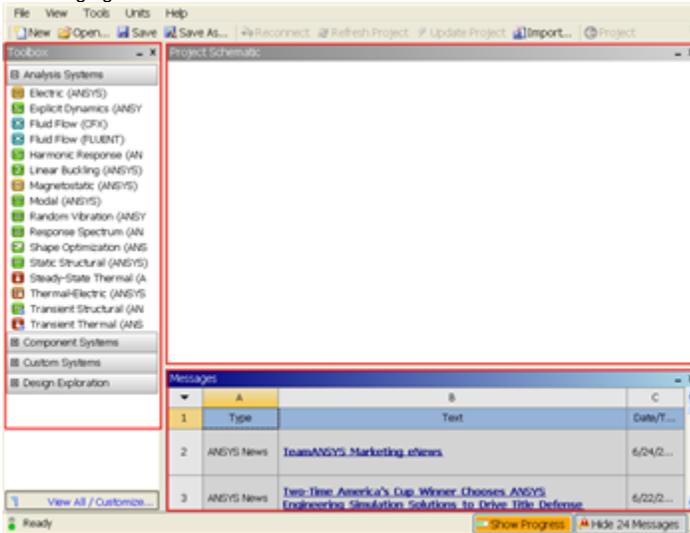

[Higher Resolution Image](#)

At the left hand side of the workbench window, you will see a toolbox full of various analysis systems. In the middle, you see an empty work space. This is the place where you will organize your project. At the bottom of the window, you see messages from ANSYS.

Select Analysis Systems




[Higher Resolution Image](#)

Since our problem involves static analysis, we will select the **Static Structural (ANSYS)** component on the left panel.

Left click (and hold) on **Static Structural (ANSYS)**, and drag the icon to the empty space in the **Project Schematic**.

Since we selected Static Structural (ANSYS), each cell of the system corresponds to a step in the process of performing the ANSYS Structural analysis. Rename the project to **Crank**.

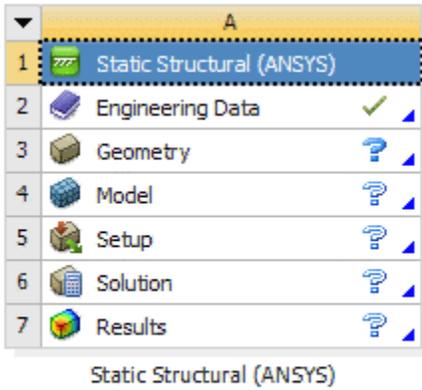

Now, we just need to work out each step from top down to get to the results for our solution.

- We start by preparing our geometry
- We use geometry to generate a mesh
- We setup the physics of the problem
- We run the problem in the solver to generate a solution
- Finally, we post process the solution to gain insight into the results

Specify Material Properties


We will first specify the material properties of the crank. The material has an Young's modulus $E=2.8 \times 10^7$ psi and Poisson's ratio $\nu=0.3$.

In the Crank cell, double click on **Engineering Data**. This will bring you to a new page. The default material given is **Structural Steel**. We will use this material and change the Young's modulus and Poisson's ratio.

Left click on **Structural Steel** once and you will see the details of Structural Steel material properties under **Properties of Outline Row 3: Structural Steel**. Under **Isotropic Elasticity**, change **Young's Modulus** and **Poisson's Ratio** to $E=2.8e7$ psi and $\nu=0.3$. Remember to change the unit accordingly.

Properties of Chart : Structural Steel				
	A	B	C	D E
1	Property	Value	Unit	<input type="checkbox"/> <input type="checkbox"/>
2	Density	7850	kg m ⁻³	<input type="checkbox"/> <input type="checkbox"/>
3	Coefficient of Thermal Expansion			<input type="checkbox"/> <input type="checkbox"/>
6	Isotropic Elasticity			<input type="checkbox"/> <input type="checkbox"/>
7	Young's Modulus	2.8E+07	psi	<input type="checkbox"/> <input type="checkbox"/>
8	Poisson's Ratio	0.3		<input type="checkbox"/> <input type="checkbox"/>
9	Alternating Stress Mean Stress	Tabular		<input type="checkbox"/> <input type="checkbox"/>
13	Strain-Life Parameters			<input type="checkbox"/> <input type="checkbox"/>
21	Tensile Yield Strength	2.5E+08	Pa	<input type="checkbox"/> <input type="checkbox"/>
22	Compressive Yield Strength	2.5E+08	Pa	<input type="checkbox"/> <input type="checkbox"/>
23	Tensile Ultimate Strength	4.6E+08	Pa	<input type="checkbox"/> <input type="checkbox"/>
24	Compressive Ultimate Strength		Pa	<input type="checkbox"/> <input type="checkbox"/>

[Higher Resolution Image](#)

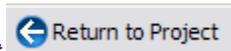

Press the **Return to Project** to return to Workbench **Project Schematic** window.

[Go to Step 2: Geometry](#)

[See and rate the complete Learning Module](#)

[Go to all ANSYS Learning Modules](#)

Author: Rajesh Bhaskaran & Yong Sheng Khoo, Cornell University


Problem Specification

1. Pre-Analysis & Start-Up
2. Geometry
3. Mesh
4. Setup (Physics)
5. Solution
6. Results
7. Verification & Validation

Step 2: Geometry

Note: You can import geometry from Solidworks. Just make sure that when you create your geometry in Solidworks, you have the Crank body and Handle body.

In the **Crank** cell, right click on **Geometry**, and click **New Geometry...**

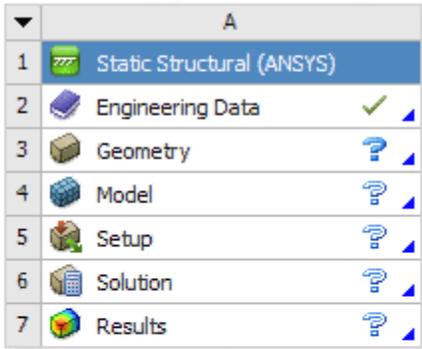

Crank


At this point, a new window, ANSYS Design Modeler will be opened. You will be asked to select desired length unit. Select **Inch** unit and click **OK**.

Creating a Sketch


Like any other common CAD modeling practice, we start by creating a sketch.

Start by creating a sketch on the **XYPlane**. Under **Tree Outline**, select **XYPlane**, then click on **Sketching** next to **Modeling** tab. This will bring up the **Sketching Toolboxes**.


Note: In sketching mode, there is **Undo** features that you can use if you make any mistake.

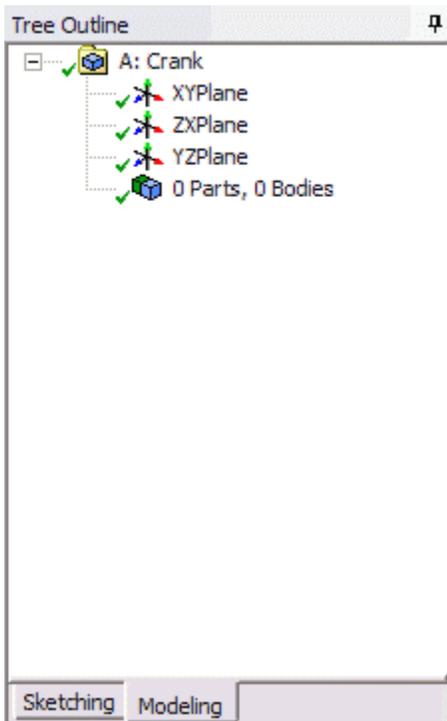


On the right, there is a **Graphic** window. At the lower right hand corner of the Graphic window, click on the **+Z** axis to have a normal look of the **XY Plane**.

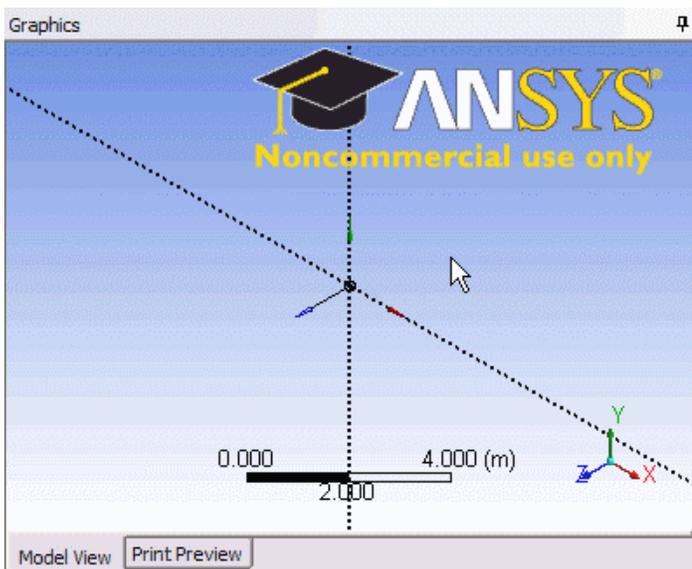

Under **Sketching Toolboxes**, click on **Draw** tab. We will first create the outline of the crank. Select **Rectangle** and draw in the **Graphics** window as shown below. Make sure that the rectangle is coincident with the x-axis (Letter C will appear).

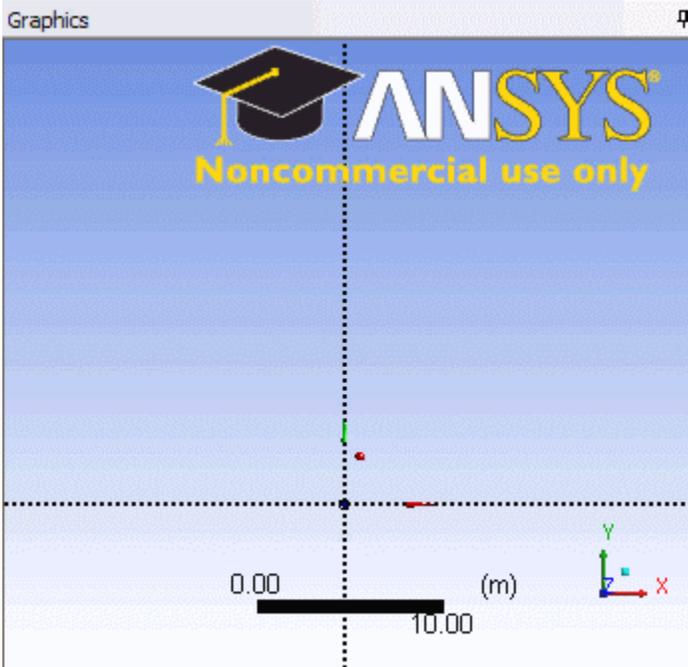


Note: You do not have to worry about dimensions for now, we can dimension them properly in the later step. Next draw the semi-circular arc at both end of rectangle. Under *Draw* Tab, select *Arc by Center* and execute the drawing as shown.

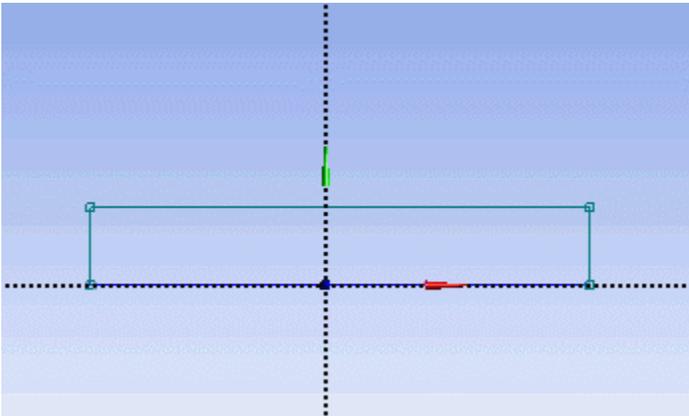

Draw the crank circular hole next. Under *Draw* tab, click on *Circle* and execute the drawing as shown.



Next, we will dimension the current drawing. Under *Sketching Toolboxes*, select *Dimensions* tab. You will see a list of dimensioning options. We will use the default *General* option. Execute the geometry dimensioning as shown below.

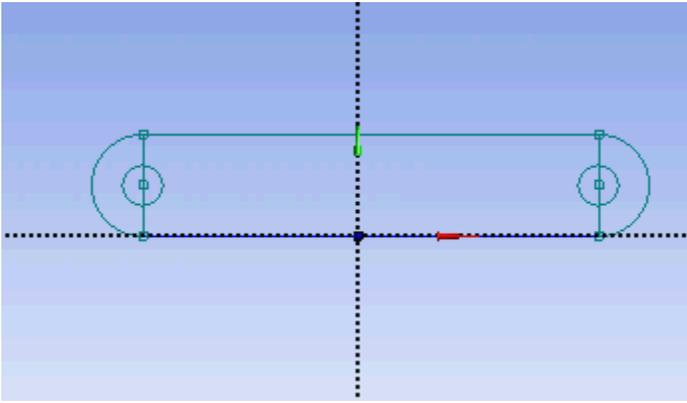

Input value for D2, H3, L1 respectively under **Details View** tab.


D2 = 0.5 in

H3 = 3.3465 in


L1 = 1.299 in

Note: Your dimension naming might not be the same as the one shown here. It is fine. Just make sure your value correspond to correct dimensions.


Next, we need to make sure that the sketch is symmetric on both side. Under **Sketching Toolboxes**, select **Constraints** tab. Select **Midpoint** and constrain the geometry in the **Graphics** window as shown below.

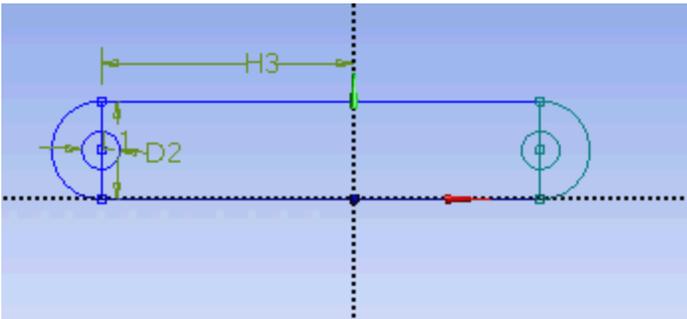


Next, we will make sure that the both circular hole is of same dimension. Under **Constraints** tab, select **Equal Radius**. Execute constraint in the **Graphics** window as shown below.

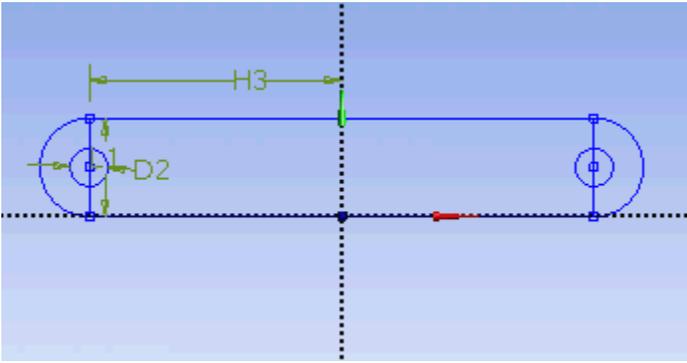

We will next trim off the unwanted edge. Under **Modify** tab, select **Trim**. Execute the trimming in **Graphics** window as shown below.

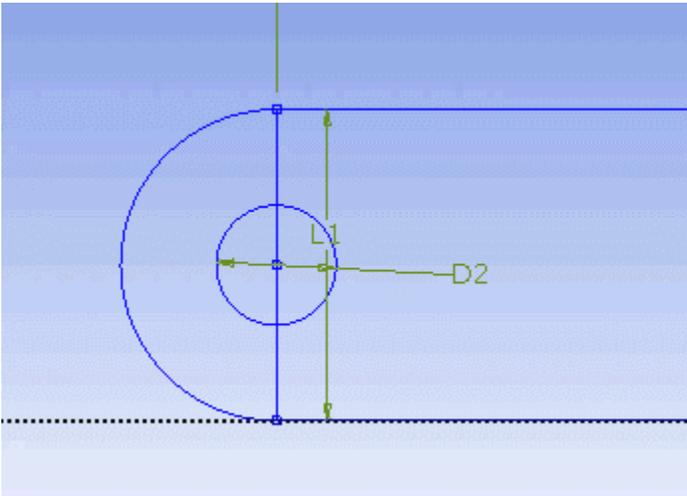


At this point, we have the outline of the crank done. We need to add the cut out in the middle of the crank. First start with a sketching of the cut-out. Under **Draw** tab, click on **Line** and execute drawing in Graphic window as shown below.

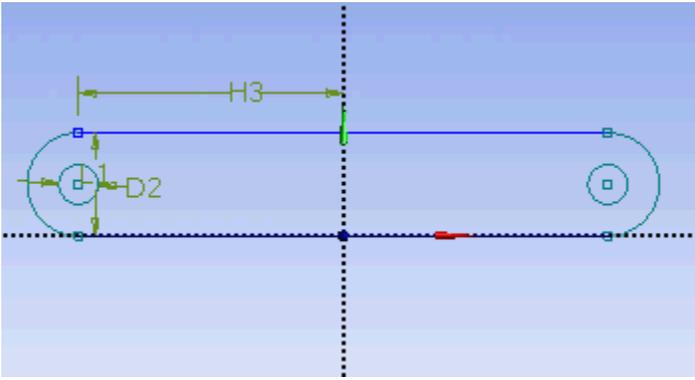

We would want the four corners of the cut out we created to be of following coordinate.

- (-0.7972, 0.1642)
- (0.7972, 0.3248)
- (0.7972, 0.9744)
- (-0.7972, 1.1368)

Unfortunately, there is no easy way in specifying the coordinates of a point. So we will have to dimension them accordingly using the dimensioning tools. Click on **Dimensions** tab and use **General** tool and execute the dimensioning as shown.

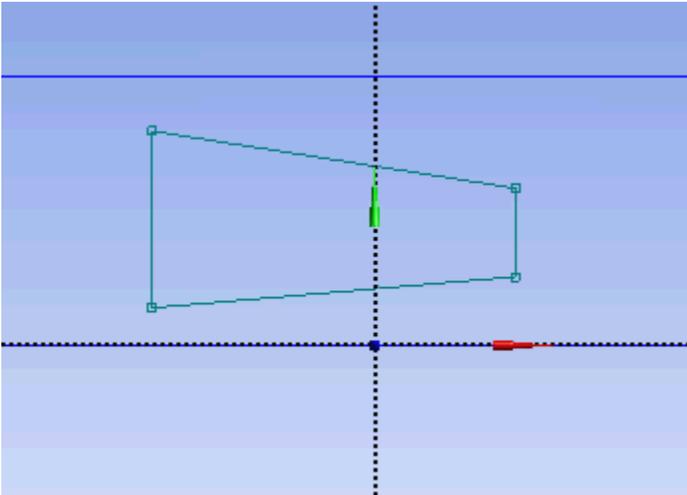


Under Details View, enter the value for the dimensions.

- H5 = 0.7972 in
- H6 = 0.7972 in
- L4 = 0.1642 in

L7 = 0.3248 in
L8 = 0.3248 in
L9 = 0.1642 in

Next we will add fillet to the corner of the cut out. Click on **Modify** tab and select **Fillet**. Enter a **Radius** value of 0.177 in. Execute the command in **Graphic:** window as shown.

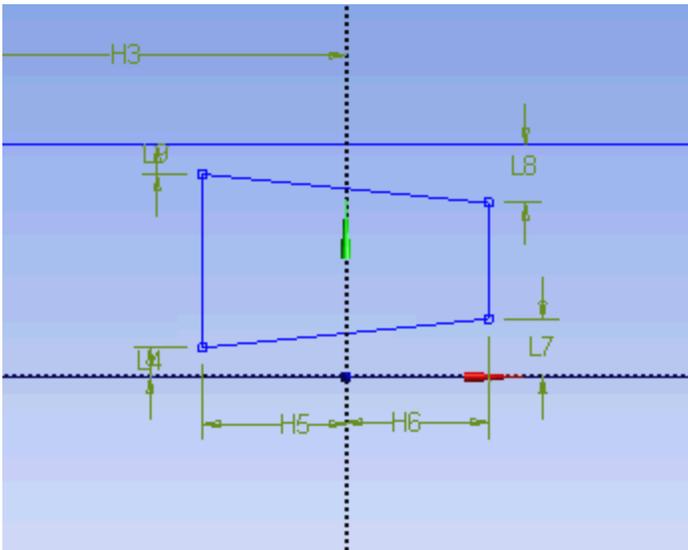


Now we have the sketch of the crank done. Next we will perform extrude feature on this sketch.


Create > Extrude

Under **Details View**, **Sketched1** is automatically selected as default **Base Object**.

Next to **FD1, Depth (>0)**, enter value 0.5 in. Click **Generate**.

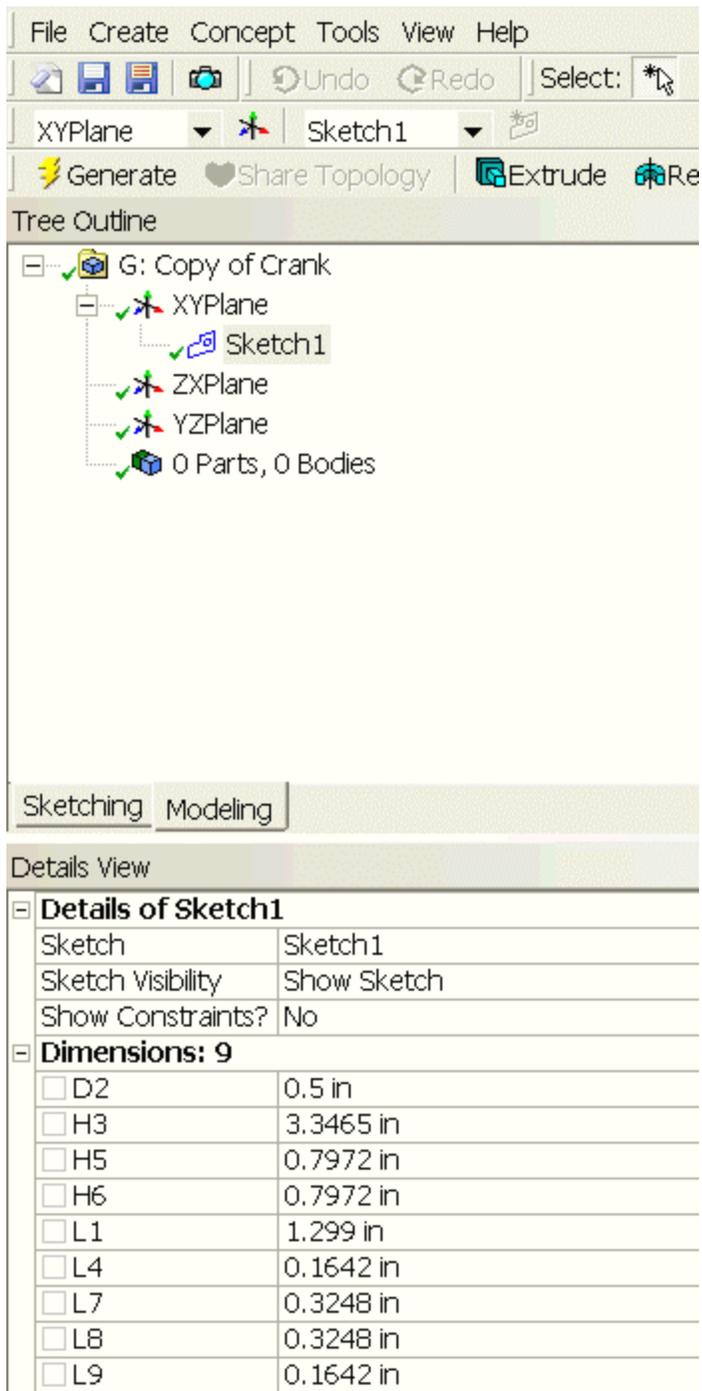


Note that after you click **Generate**, you see a new part created under the **Tree Outline**. This is what you should have in the **Graphics** window at this point.

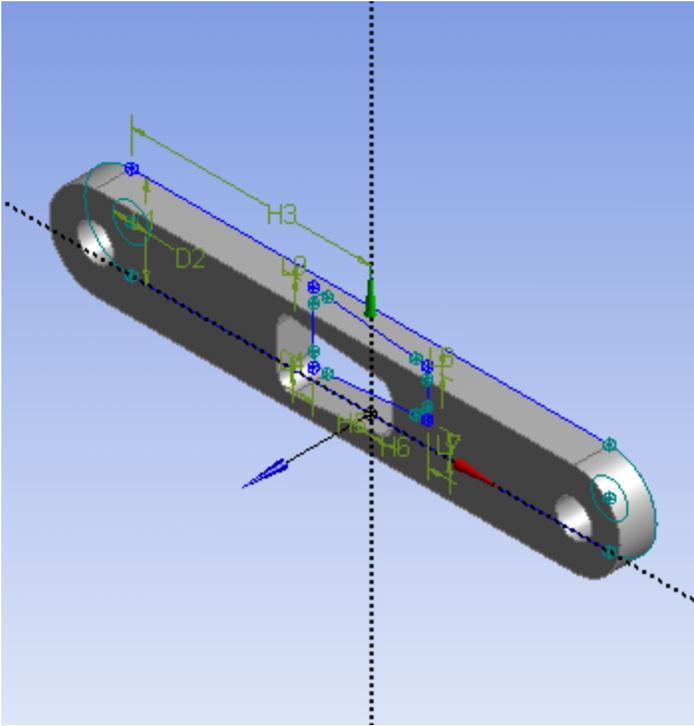


Now let's keep moving by adding a handle to this crank. Under **Tree Outline**, click on **XY Plane** and click on **New Sketch** . This will create a new sketch under **XY Plane**. You will see **Sketch2** created under **XYPlane**. Click on the **Sketching** tab to start sketching the handle. The base sketch for the handle is just a circle. Under **Draw** tab, click on **Circle**.




Execute the drawing in the **Graphics** window as shown below.

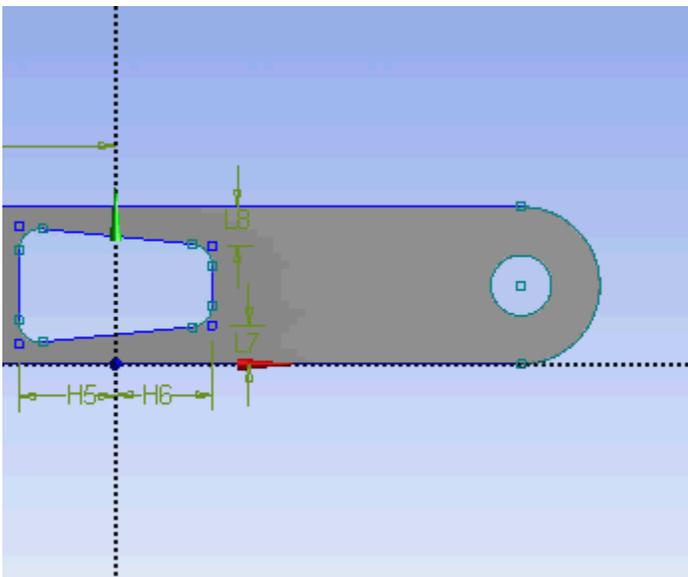

At this point, we have the crank handle sketch done. We can continue adding **Extrude** feature to the sketch. Click **Extrude**, make sure that **Sketch2** is selected next to **Base Object**. Next to **Operation** change **Add Material** to **Add Frozen**. This is because we want to create the crank as two separate bodies. If we use the default **Add Material**, both the crank and crank handle will be created as a single body. Next to **FD1, Depth (>0)** enter value of 2.645. We can now **Generate** this feature. Under Tree Outline, you will see that we now have 2 Parts and 2 Bodies. Select both parts and perform **Form New Part** operation.

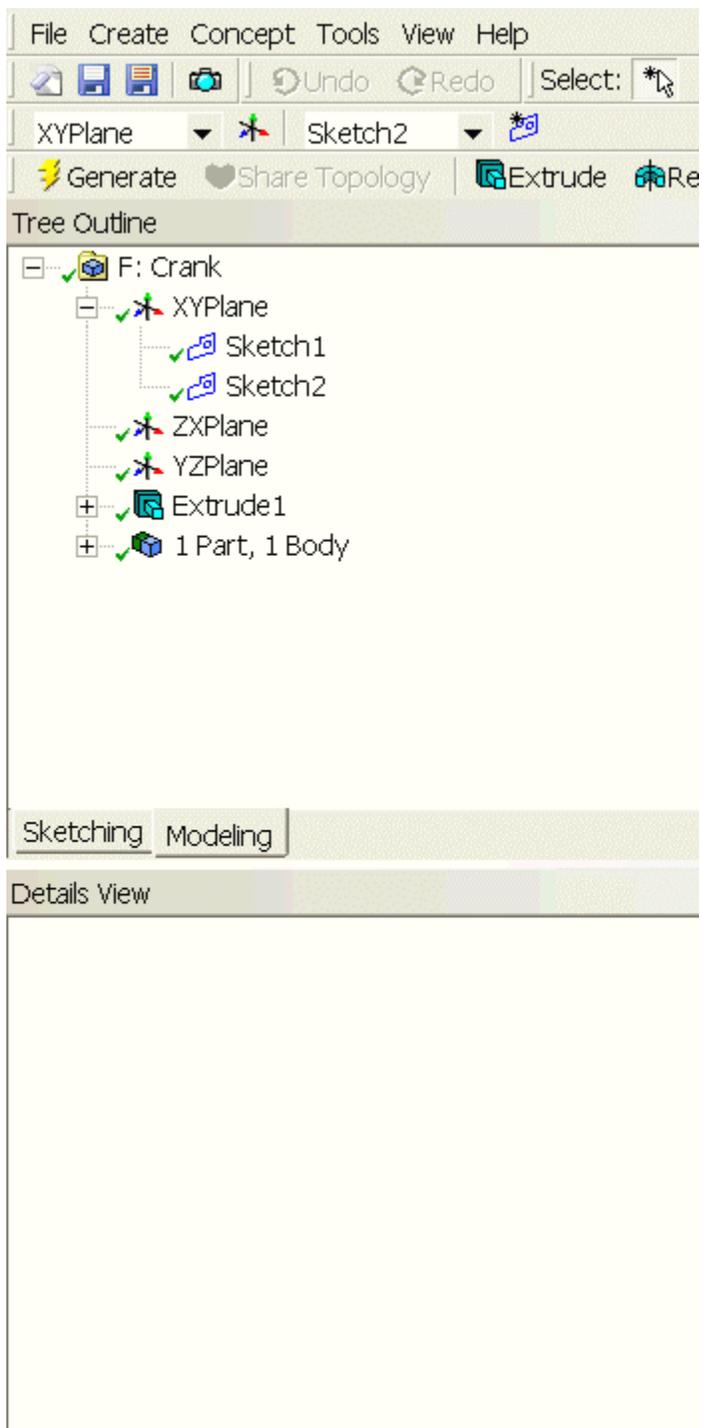

In the **Graphics** window, this is what you should have now.

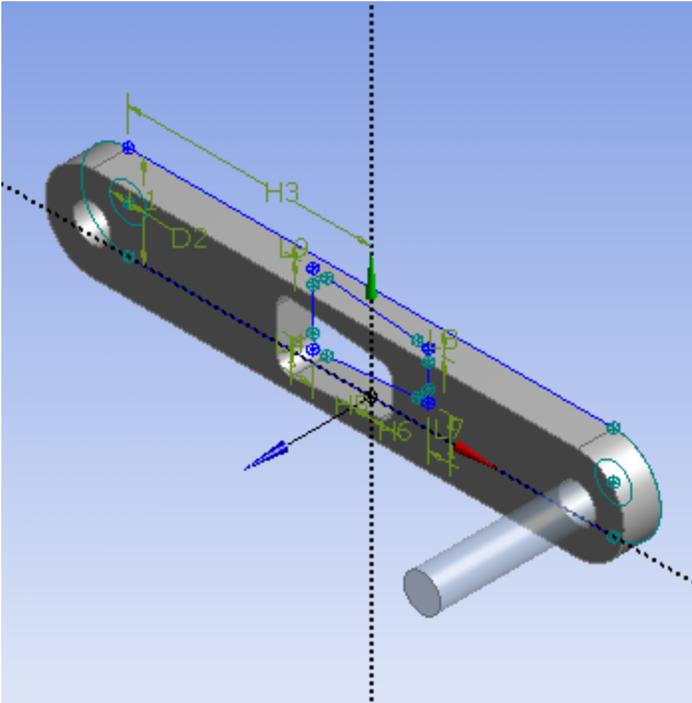

Congratulations! We are done with the Geometry setup. Let's close the Design Modeler and go back to the Workbench (Your work will be saved. Don't worry).

Go to Step 3: Mesh

[See and rate the complete Learning Module](#)

[Go to all ANSYS Learning Modules](#)

Author: Rajesh Bhaskaran & Yong Sheng Khoo, Cornell University

Problem Specification


1. Pre-Analysis & Start-Up
2. Geometry
3. Mesh
4. Setup (Physics)
5. Solution
6. Results
7. Verification & Validation

Step 3: Mesh


In the **Crank** cell, right click on **Model**, and click **Edit...**

A new window Mechanical Modeler will open. We will start with the default mesh generation method. Under **Outline**, right click on **Mesh** and click **Generate Mesh**. This will give us mesh that ANSYS mesher thinks appropriate for our geometry. We see that ANSYS is smart enough to create a mesh that sweep across the cross sectional area of the crank. This is the type of mesh we are seeking for our geometry. However, sizing wise, the mesh is too coarse. We will have to increase the number of elements.

Under **Outline**, click on **Mesh**. Next under **Details of "Mesh"**, expand the **Sizing** tab and we will specify the element size that we desire. Element size of 0.125 in seems to be a good start. Next to **Element Size**, enter 0.125. Finally, click on **Generate Mesh** again.

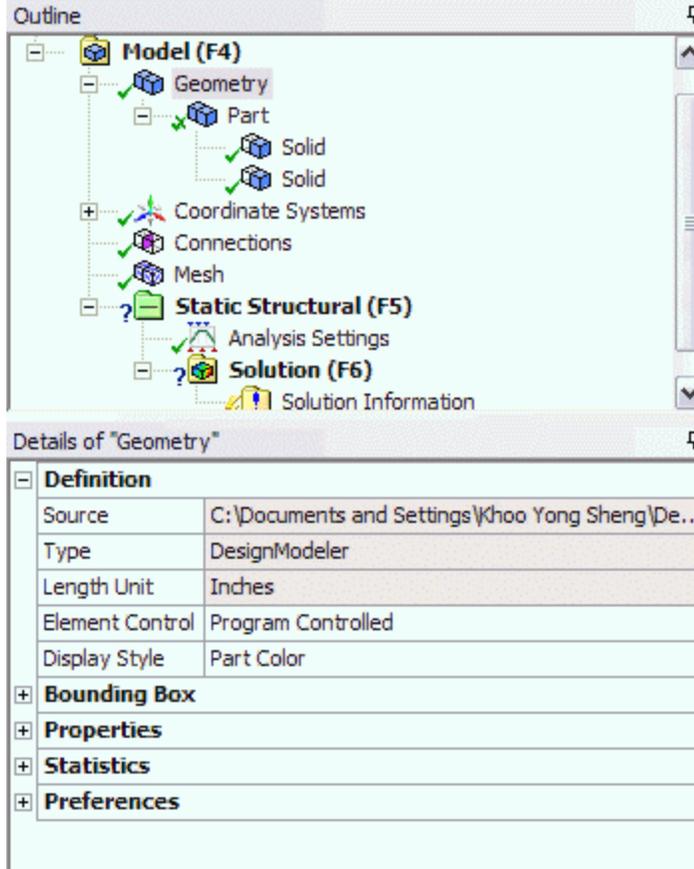

This is the mesh that appear in the Graphics window on the right.

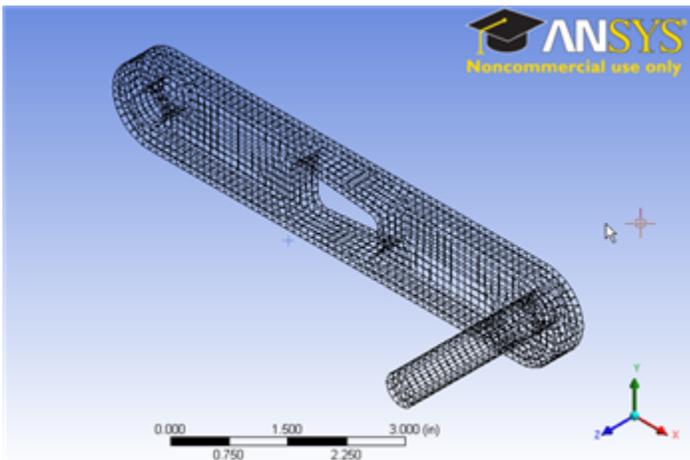

[Higher Resolution Image](#)

You should have 18205 nodes and 3582 elements for your mesh. Click on **Statistics** under **Details of "Mesh"** to see that.

For future reference, the default mesh might not produce the desirable mesh that we want. To specify our own mesh control, right click on **Mesh** and select **Insert**. This way, we can insert meshing type and control that we desire. To learn more about different meshing methods, please refer to the **Mechanical Help** at the top menu.

[Go to Step 4: Setup \(Physics\)](#)

[See and rate the complete Learning Module](#)

[Go to all ANSYS Learning Modules](#)

Author: Rajesh Bhaskaran & Yong Sheng Khoo, Cornell University

Problem Specification

1. Pre-Analysis & Start-Up
2. Geometry
3. Mesh
4. Setup (Physics)
5. Solution
6. Results
7. Verification & Validation


Step 4: Setup (Physics)

We have two loading conditions to specify. First we must fix the hole where the crank would attach to the bicycle. Then we apply our loading condition of 100 lb on the end of the shaft.

Fixed Support

Under **Outline**, right click on **Static Structural (F5)**, move the mouse cursor to **Insert** and select **Fixed Support**.


Now in the **Graphics** area, select the cylindrical hole and click **Apply** next to the **Geometry** under **Details of "Fixed Support"**. You will see the fixed support boundary condition shown in the Graphics window.

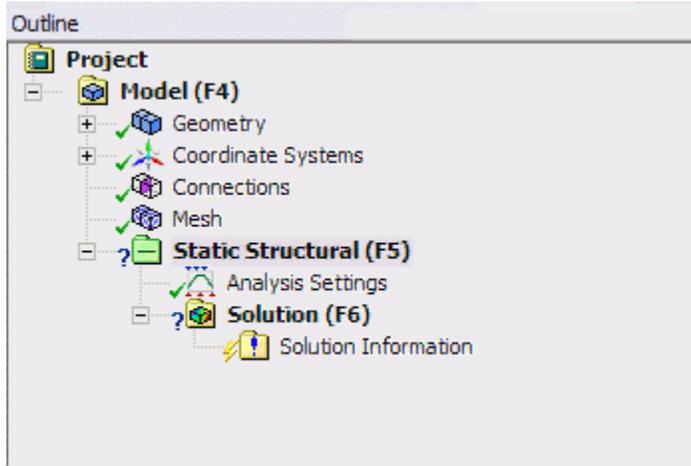

Force on Shaft

Now we will apply 100 lb force at the end of the shaft. This time, I will show you another way of inserting boundary condition.

Under **Outline**, left click on **Static Structural (F5)**. Third menu at the top will show different type of boundary conditions. Left click on **Loads** and select **Force**. In the **GraphicsDetails of "Force"** window, select the circular area at the end of the shaft. Under , click **Apply** next to **Geometry**. The selected area in the Graphics window will be applied with this boundary condition. Next we will enter the value of 100 lb force. Next to **Define By**, change **Vector** to **Components**. Enter a value of -100 next to **Y Component**. In the Graphics window, you will see the direction of force applied.

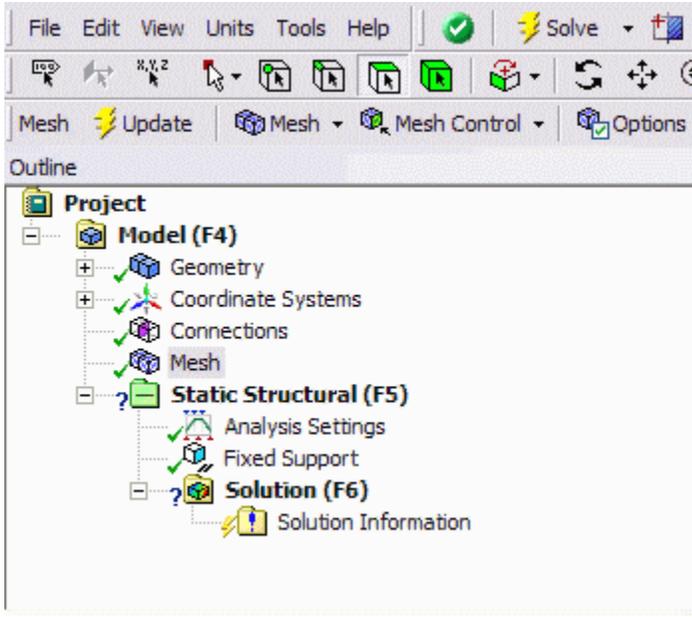

Congratulations! We are done setting up the boundary conditions.

[Go to Step 5: Solution](#)

[See and rate the complete Learning Module](#)

[Go to all ANSYS Learning Modules](#)

Author: Rajesh Bhaskaran & Yong Sheng Khoo, Cornell University


[Problem Specification](#)

- [1. Pre-Analysis & Start-Up](#)
- [2. Geometry](#)
- [3. Mesh](#)
- [4. Setup \(Physics\)](#)
- [5. Solution](#)
- [6. Results](#)
- [7. Verification & Validation](#)

Step 5: Solution

Now that we have set up the boundary conditions, we can actually solve for a solution. Before we do that, let's take a minute to think about what is the post-processing that we are interested in. We are interested in the deflection and stress on the crank. Let's set up those post-processing parameters before we click solve button.

Under Outline, left click on **Solution (F6)**. At the top third menu, insert **Total Deformation** and **von Mises Stress**. Finally click **Solve** at the top menu.

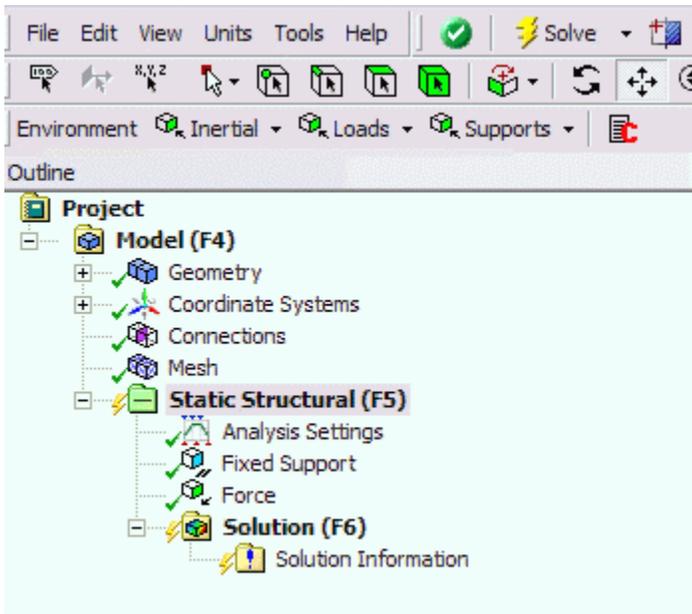

Go to Step 6: Results

See and rate the complete Learning Module

Go to all ANSYS Learning Modules

Author: Rajesh Bhaskaran & Yong Sheng Khoo, Cornell University


Problem Specification

1. Pre-Analysis & Start-Up
2. Geometry
3. Mesh
4. Setup (Physics)
5. Solution
6. Results
7. Verification & Validation

Step 6: Results

Total Deformation

Let first look at Total Deformation. Under **Solution (F6)**, click on **Total Deformation**. The Total Deformation plot is then shown in the Graphics window. The maximum deflection is 0.026644 in. We should check that our results make sense. It appears that the boundary conditions have been satisfied as the tip of the shaft moves downward and the hole at the other end of the crank is held in place.

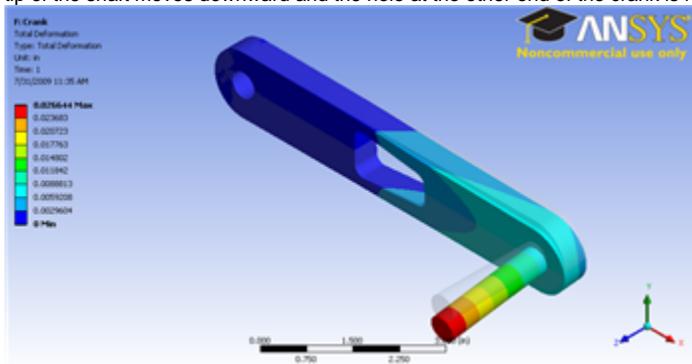


[Higher Resolution Image](#)

Note: To show the original undeformed crank, go to third menu click  and click on  Show Undeformed Model


Notice the deformation is exaggerated, revealing that deformation is primarily caused by torsion.

You can also animate the deformation by clicking play button right under **Graphics** window.

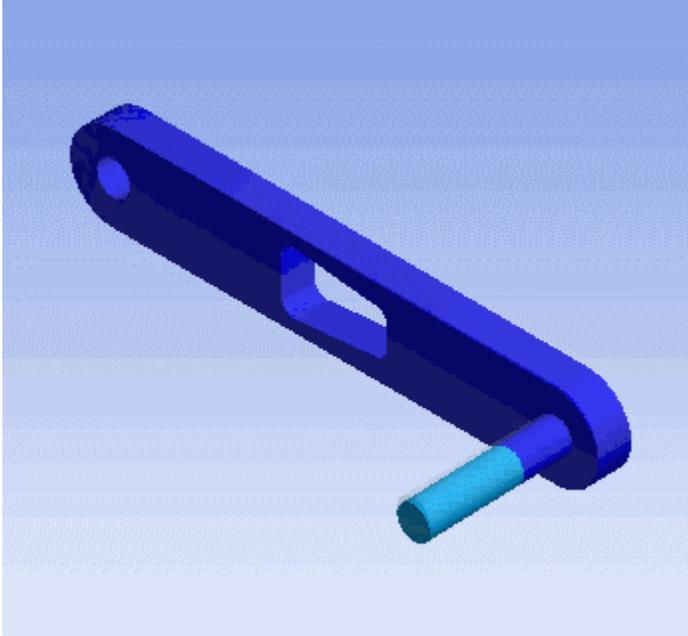


Von Mises Stress

Now let's look at the stress on the crank. Left clicking on Equivalent Stress under Solution (F6). In the Graphics window show the crank stress contour. The maximum stress is 27897 psi.

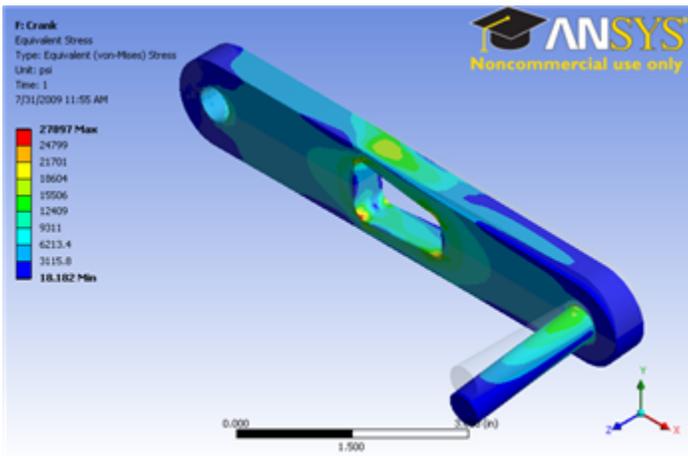

[Higher Resolution Image](#)

Here's the view without the handle.

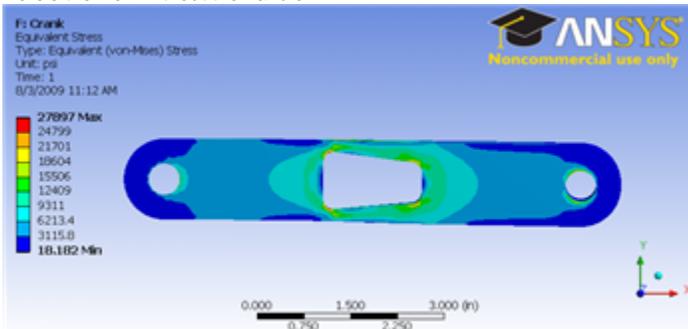

[Higher Resolution Image](#)

Note: To hide the crank handle, select the appropriate body in the Graphics window and right click and select **Hide Body**. Do the same to unhide a body.
[Go to Step 7: Verification & Validation](#)

[See and rate the complete Learning Module](#)

[Go to all ANSYS Learning Modules](#)

Author: Rajesh Bhaskaran & Yong Sheng Khoo, Cornell University

Problem Specification

1. Pre-Analysis & Start-Up
2. Geometry
3. Mesh
4. Setup (Physics)
5. Solution
6. Results
7. Verification & Validation

Step 7: Verification & Validation

It is **very important** that you take the time to check the validity of your solution. This section leads you through some of the steps you can take to validate your solution.

Simple Checks

Does the deformed shape look reasonable and agree with the applied boundary conditions? We checked this in step 6.

Do the reactions at the supports balance the applied forces for static equilibrium? To check this, select

Outline > Solution (F6) > Insert > Probe > Force Reaction

Under **Details of "Force Reaction"**, select **Fixed Support** as **Boundary Condition**. At the top menu, click Solve to Evaluate All Results.

The forces in the X and Z directions are essentially zero and the total Y Axis is 100.00 (lbf) as expected.

Refine Mesh

Let's repeat the solution on a finer mesh with more smaller element size. Repeat the mesh steps, but this time use element size of 0.05 instead of 0.125. This will create 10 divisions through the thickness of the crank instead of 4.

Obtain a new solution and compare both solution.

	Coarser Mesh	Finer Mesh
Max Deformation	0.0257in	0.0258in
Max Stress	27897psi	27978psi

The difference in maximum displacement at the tip of the crank handle is less than 0.4%.

The difference in maximum stress at the cut out area is less than 0.3%.

This means that our mesh is refine enough and the solution obtained using the original mesh is probably good enough.

Do keep in mind that one would have to make more detailed comparisons between the solutions on the two meshes before we can make a definitive statement about the mesh independence of our results.

[See and rate the complete Learning Module](#)

[Go to all ANSYS Learning Modules](#)