

ANSYS 11 - Crank Step 4

Problem Specification

1. Start-up and preliminary set-up
2. Specify element type and constants
3. Specify material properties
- 4. Specify geometry**
5. Mesh geometry
6. Specify boundary conditions
7. Solve!
8. Postprocess the results
9. Validate the results

Step 4: Specify geometry



Note that you can import geometry from a CAD package such as Pro/Engineer or SolidWorks into ANSYS by following [these instructions](#).

Since the geometry excluding the cutout region is symmetric with respect to the vertical centerline, we will model half of the crank and then mirror the other half to complete the crank body. Then we will create the cutout from a set of keypoints.

Create a Rectangular Area

Main Menu > Preprocessor > Modeling > Create > Areas > Rectangle > By 2 Corners


Enter the values as shown below. Click **OK**.

Rectangle by 2 Corners	
☒ Pick	☐ Unpick
WP X	=
Y	=
Global X	=
Y	=
Z	=
WP X	-3.3465
WP Y	0
Width	3.3465
Height	1.299
OK	Apply
Reset	Cancel
Help	

It may be helpful to turn on area numbering to identify the different areas you create.

Utility menu > PlotCtrls > Numbering ...

Check the box next to **AREA Area numbers** to turn on area numbering. Click **OK**.

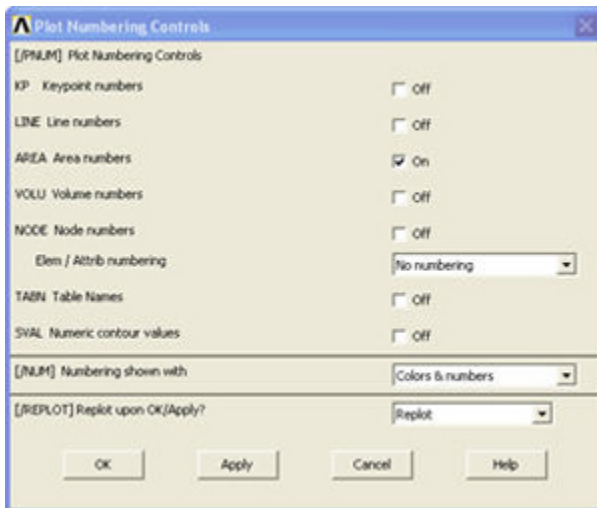

Plot Numbering Controls

[/PRNUM] Plot Numbering Controls

KP Keypoint numbers ☐ Off
 LINE Line numbers ☐ Off
 AREA Area numbers ☒ On
 VOLU Volume numbers ☐ Off
 NOOE Node numbers ☐ Off
 Elem / Attrib numbering
 TABN Table Names ☐ Off
 SVAL Numeric contour values ☐ Off


[/NUM] Numbering shown with

[/REPLOT] Replot upon OK/Apply?

Create Circular Areas

Main Menu > Preprocessor > Modeling > Create > Areas > Circle > Solid Circle

Enter the values as shown below. Click **Apply**. This creates the rounded end of the crank.

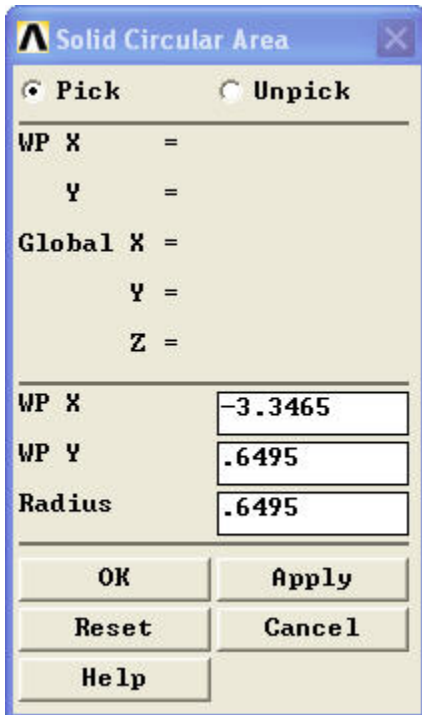

Solid Circular Area

☒ **Pick**
☐ **Unpick**

WP X =
 Y =
 Global X =
 Y =
 Z =

WP X
 WP Y
 Radius

Enter the new set of values shown below. Click **OK**. This creates the area for a hole.

Solid Circular Area

☒ **Pick** ☐ **Unpick**

WP X =
Y =

Global X =
Y =
Z =

WP X -3.3465

WP Y .6495


Radius .25

OK Apply

Reset Cancel

Help

Your window should look something like the picture below. You can click **Utility Menu > Plot > Replot** or click on the **Fit View**  button on the right toolbar to refresh the view.

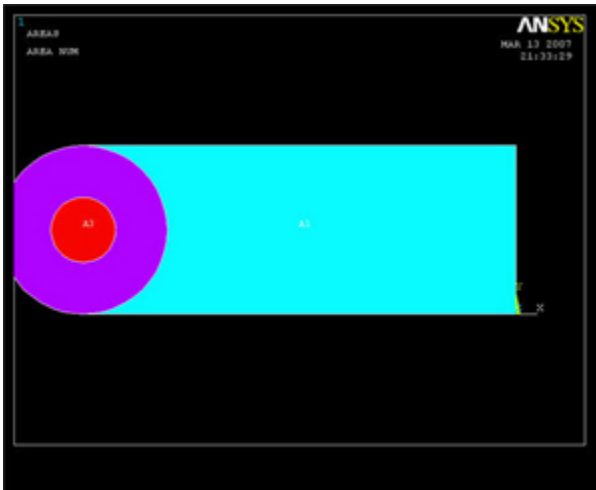


To correct any mistakes, you must click **Main Menu > Preprocessor > Modeling > Delete > Areas Only** and then pick each area you want to remove. The mouse pointer will show an up arrow for picking areas and a down arrow for un-picking areas. Right-click to switch between pick and unpick mode. When you have made all your selections, click **OK**. Click **Utility Menu > Plot > Replot** to refresh the view.

Add Areas

Main Menu > Preprocessor > Modeling > Operate > Booleans > Add > Areas

Pick the rectangular and large circular areas. Click **OK**. (This is where the area numbering may come in handy) The result should look like the image below.

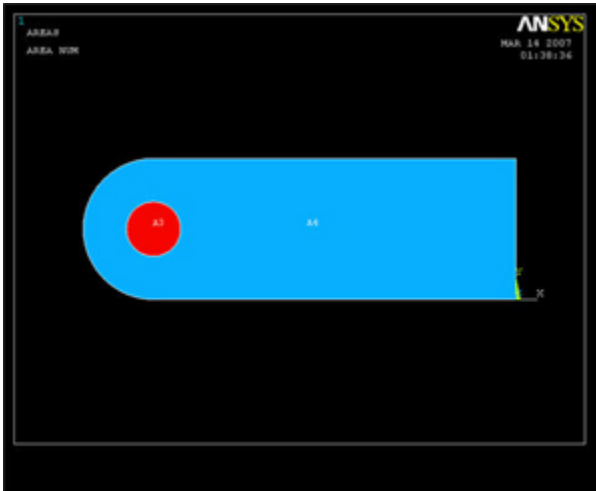


Subtract Hole Area

Now we create the hole by subtracting the round area from the rest of the crank.

Main Menu > Preprocessor > Modeling > Operate > Booleans > Subtract > Areas

First pick the body of the crank and click **OK**. Then pick the hole, and click OK again. The result is shown below.

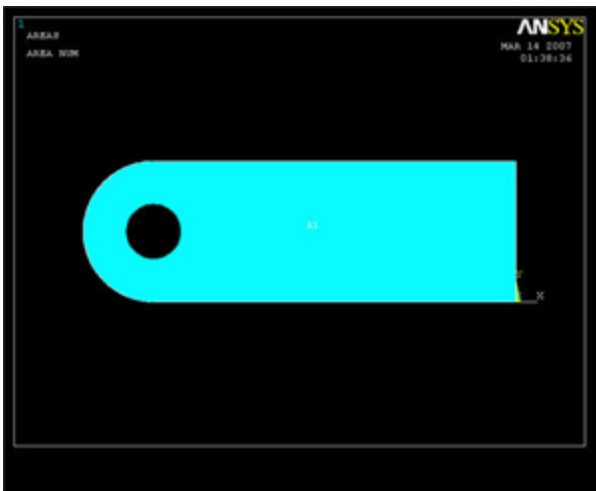

Reflecting the Area


To create the other half of the crank, we will reflect the current area about the Y-Z plane.

Main Menu > Preprocessor > Modeling > Reflect > Areas

Click on **Pick All**. The Y-Z plane is selected by default, so click **OK**. All that's left now is to add the two halves of the crank together.

Main Menu > Preprocessor > Modeling > Operate > Booleans > Add > Areas

Click on **Pick All**.

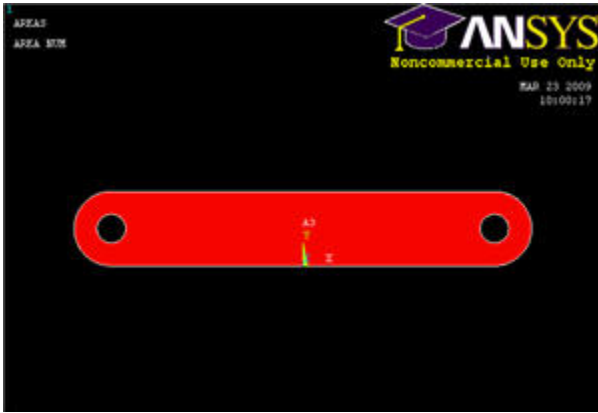


[Higher Resolution Image](#)

Creating Keypoints for the Cut-out Region

Since the material to be removed in the middle of the crank is an irregular shape, we will define some keypoints in order to create and subtract this area.

Main Menu > Preprocessor > Modeling > Create > Keypoints > In Active CS


Enter the values shown below and click **Apply**. Leave the keypoint number blank to let ANSYS automatically assign an ID number. Alternatively, you may specify your own number (as long as that keypoint isn't already taken). To see a list of existing keypoints, go to **Utility Menu > List > Keypoint > Coordinates Only**. The Z location is left blank because it is 0 by default.

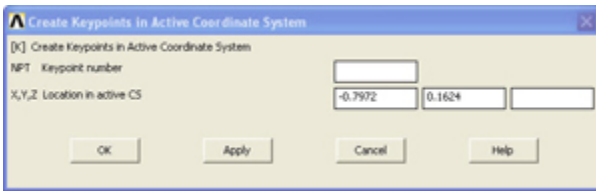

Points to add:

(-0.7972, 0.1642)
 (0.7972, 0.3248)
 (0.7972, 0.9744)
 (-0.7972, 1.1368)

The result:

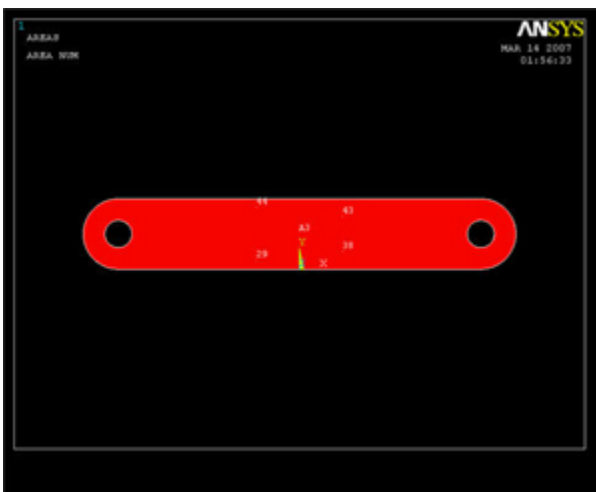

Creating Lines and Fillets from Keypoints


Main Menu > Preprocessor > Modeling > Create > Lines > Lines > Straight Line

Select pairs of points by clicking on beginning and end keypoints. You will notice that after clicking on the first point, ANSYS will predict where you want the line to be drawn to. Select four lines to form a quadrilateral at the center of the crank, then click **OK**.

Don't panic if all the lines disappear. In the current view, only areas are displayed. Switch to line view by:

Utility Menu > Plot > Lines

The result:

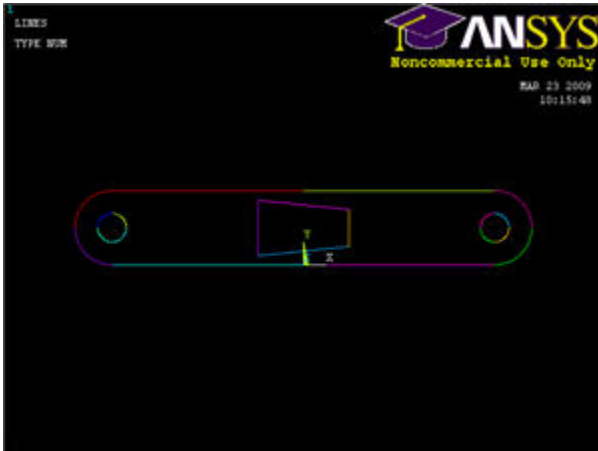

[Higher Resolution Image](#)

Next, we want to fillet the corners, as specified in the drawing.



You can zoom in and out by using the mouse wheel or clicking on the appropriate buttons on the right toolbar (magnifying glass with + or -).

Main Menu > Preprocessor > Modeling > Create > Lines > Line Fillet

Pick two lines that meet at a corner where you want to put a fillet, then click **OK**. Enter a **Fillet radius** of 0.177, and click **Apply**. Repeat for the other three corners of the quadrilateral. Compare results with image below.



Finishing the Crank Face

All that's left now is to create a new area from the filleted quadrilateral region, and then subtract it from the rest of the crank face.

Main Menu > Preprocessor > Modeling > Create > Areas > Arbitrary > By Lines

In the Pick window, select **Loop**. Click on any of the line segments that we have just created and the entire cutout region should be selected. Click **OK**. Switch back to area view by going to

Utility Menu > Plot > Areas

Subtract out the new area from the rest of the crank by the same procedure as before.


Main Menu > Preprocessor > Modeling > Operate > Booleans > Subtract > Areas

Select the rest of the crank face, then **OK**.



It will be helpful to hold down the left mouse-button while picking an area, as an area changes color when it is selected. Move the pointer until the desired area is highlighted, then release the button. Finally, select the new cut-out area, then press OK again.

The result:

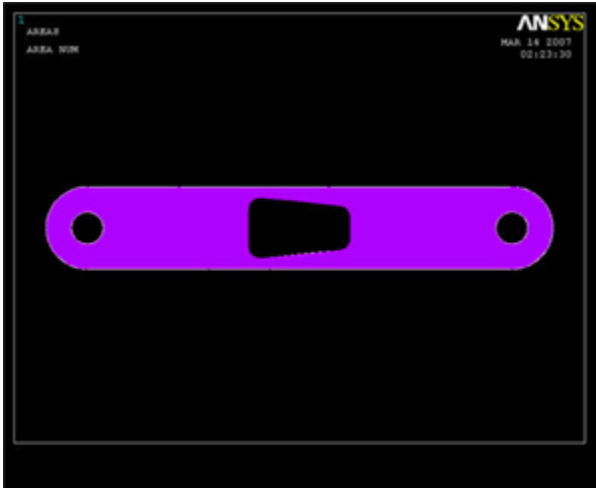

Creating the Volume

We will now make the face 3-D by extruding it by a given offset distance, similar to modeling in CAD.


Main Menu > Preprocessor > Modeling > Operate > Extrude > Areas > By XYZ Offset

Click **Pick All**. In the following window, change the DZ offset to 0.5. Click **OK**. To see your finished work, go to

Utility Menu > Plot > Volumes



Then click on the isometric view button on the right toolbar.

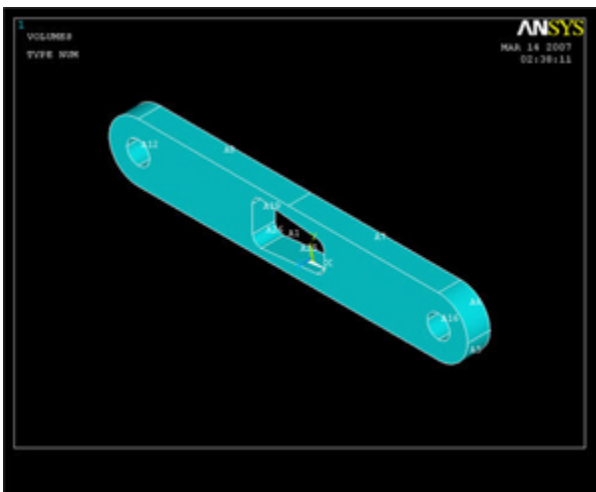

[Higher Resolution Image](#)

Creating the Pedal Shaft

Main Menu > Preprocessor > Modeling > Create > Volumes > Cylinder > Solid Cylinder

Enter the following values and press **OK**.


Solid Cylinder

☒ Pick
☐ Unpick

WP X =
Y =
Global X =
Y =
Z =

WP X 3.3465
WP Y .6495
Radius .25
Depth 2.645

OK

Apply

Reset

Cancel

Help

We must now glue the shaft to the crank. The reason for using "glue" instead of performing a boolean add on the volumes is to maintain two discrete parts. This provides more flexibility in modeling, as it can allow for different materials and meshes. Note: If glue is not used, the two pieces will be independent of each other and the solution will be incorrect.


Main Menu > Preprocessor > Modeling > Operate > Booleans > Glue > Volumes

Click **Pick All** to glue our two volumes together. Note that there are no visual indicators of whether or not the volumes have been glued. You should check the Command Window and look for the "GLUE VOLUMES" command.

```

GLUE VOLUMES
INPUT VOLUMES =      1      2
INPUT VOLUMES WILL BE DELETED IF POSSIBLE
OUTPUT VOLUMES =      1      3
  
```

Your complete crank model should now look like this:

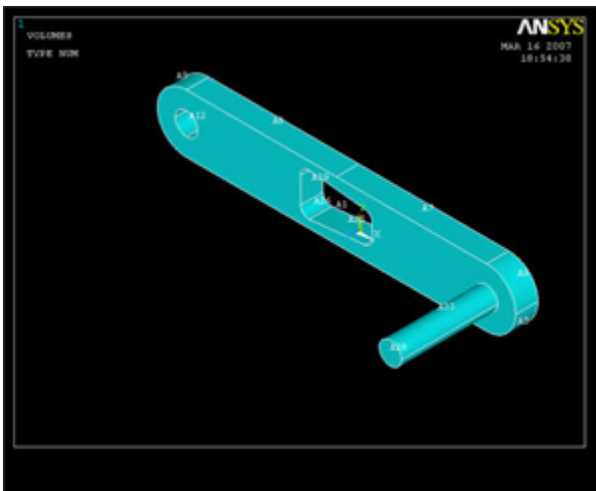

[Higher Resolution Image](#)

Save Your Work

Toolbar > SAVE_DB

[Go to Step 5: Mesh geometry](#)

[See and rate the complete Learning Module](#)

[Go to all ANSYS Learning Modules](#)