

ANSYS - Crank 4 Specify Geometry Content


Step 4: Specify geometry

Since the geometry excluding the cutout region is symmetric with respect to the vertical centerline, we will model half of the crank and then mirror the other half to complete the crank body. Then we will create the cutout from a set of keypoints.

Create a Rectangular Area

Main Menu > Preprocessor > Modeling > Create > Areas > Rectangle > By 2 Corners

Enter the values as shown below. Click OK.

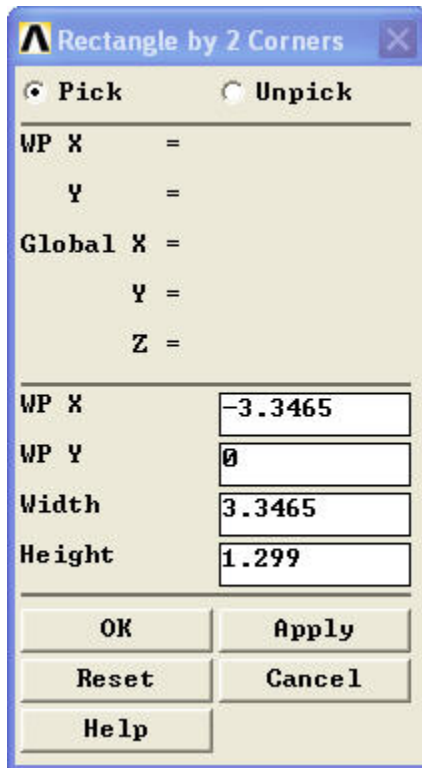


The 'Rectangle by 2 Corners' dialog box is shown. It has a title bar with the ANSYS logo and a close button. Below the title bar are two radio buttons: 'Pick' (selected) and 'Unpick'. The dialog is divided into two main sections. The top section contains labels for 'WP X', 'Y', 'Global X', 'Y', and 'Z', each followed by an equals sign. The bottom section contains four input fields: 'WP X' with the value '-3.3465', 'WP Y' with the value '0', 'Width' with the value '3.3465', and 'Height' with the value '1.299'. At the bottom of the dialog are six buttons: 'OK', 'Apply', 'Reset', 'Cancel', 'Help', and a button that is partially obscured by the 'Help' button.

It may be helpful to turn on area numbering to identify the different areas you create.

Utility menu > PlotCtrls > Numbering ...

Check the box next to AREA Area numbers to turn on area numbering. Click OK.

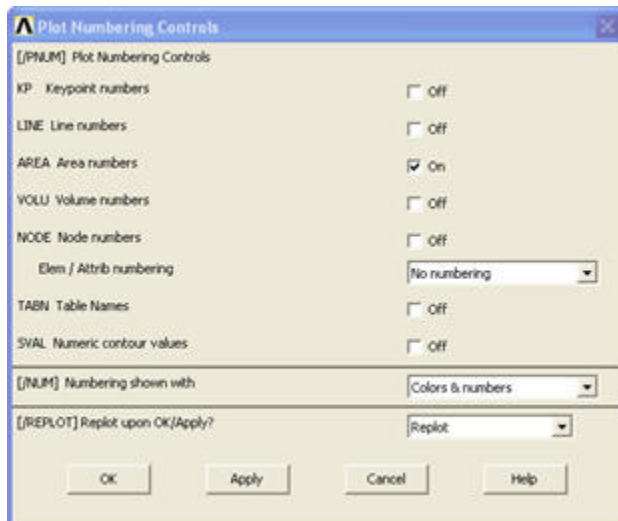


The 'Plot Numbering Controls' dialog box is shown. It has a title bar with the ANSYS logo and a close button. The dialog is divided into two main sections. The top section contains a list of items with checkboxes: 'KP Keypoint numbers' (Off), 'LINE Line numbers' (Off), 'AREA Area numbers' (On), 'VOLUME Volume numbers' (Off), 'NODE Node numbers' (Off), 'Elem / Attrib numbering' (No numbering), 'TABN Table Names' (Off), and 'SVAL Numeric contour values' (Off). The bottom section contains two dropdown menus: '[/NUM] Numbering shown with' (Colors & numbers) and '[/REPLOT] Repplot upon OK/Apply?' (Repplot). At the bottom of the dialog are four buttons: 'OK', 'Apply', 'Cancel', and 'Help'.

Create Circular Areas


Main Menu > Preprocessor > Modeling > Create > Areas > Circle > Solid Circle

Enter the values as shown below. Click Apply. This creates the rounded end of the crank.

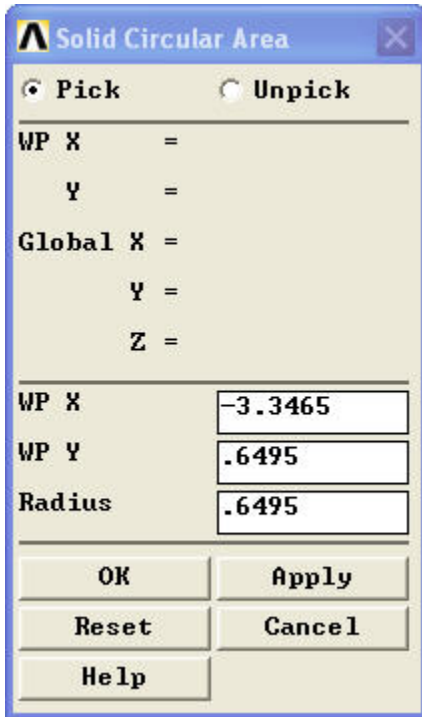


The dialog box titled "Solid Circular Area" has a close button (X) in the top right corner. It contains two radio buttons: "Pick" (selected) and "Unpick". Below these are three sets of labels: "WP X =", "Y =", and "Global X =", each followed by an equals sign. Further down are three input fields: "WP X" with the value "-3.3465", "WP Y" with the value ".6495", and "Radius" with the value ".6495". At the bottom are five buttons: "OK", "Apply", "Reset", "Cancel", and "Help".

Enter the new set of values shown below. Click OK. This creates the area for a hole.

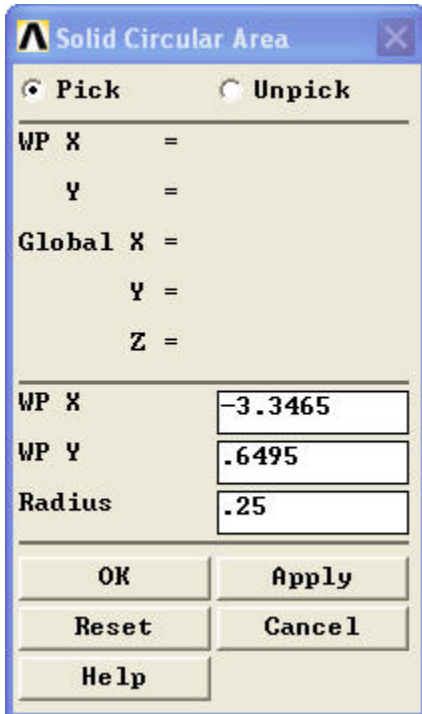

The dialog box titled "Solid Circular Area" has a close button (X) in the top right corner. It contains two radio buttons: "Pick" (selected) and "Unpick". Below these are three sets of labels: "WP X =", "Y =", and "Global X =", each followed by an equals sign. Further down are three input fields: "WP X" with the value "-3.3465", "WP Y" with the value ".6495", and "Radius" with the value ".25". At the bottom are five buttons: "OK", "Apply", "Reset", "Cancel", and "Help".

Your window should look something like the picture below. You can click Utility Menu > Plot > Replot or click on the Fit View button on the right toolbar (the button with a block under a magnifying glass) to refresh the view.

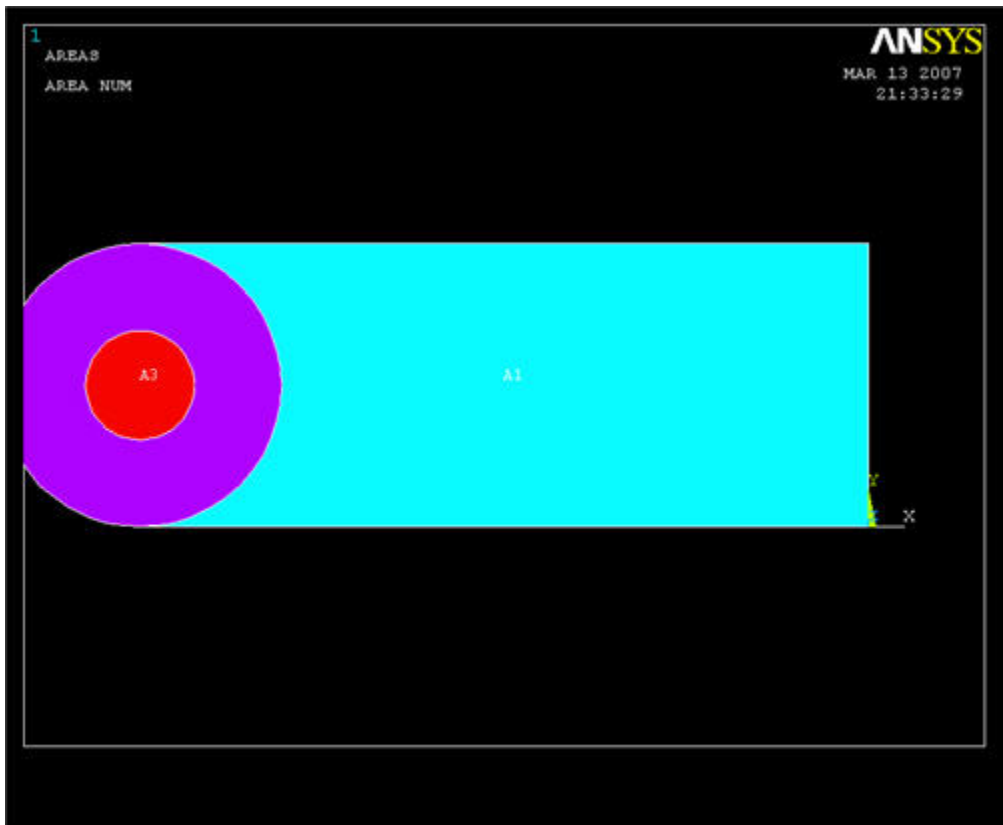


To correct any mistakes, you must click Main Menu > Preprocessor > Modeling > Delete > Areas Only and then pick each area you want to remove. The mouse pointer will show an up arrow for picking areas and a down arrow for un-picking areas. Right-click to switch between pick and unpick mode. When you have made all your selections, click OK. Click Utility Menu > Plot > Replot to refresh the view.

Add Areas

Main Menu > Preprocessor > Modeling > Operate > Booleans > Add > Areas

Pick the rectangular and large circular areas. Click OK. (This is where the area numbering may come in handy) The result should look like the image below.

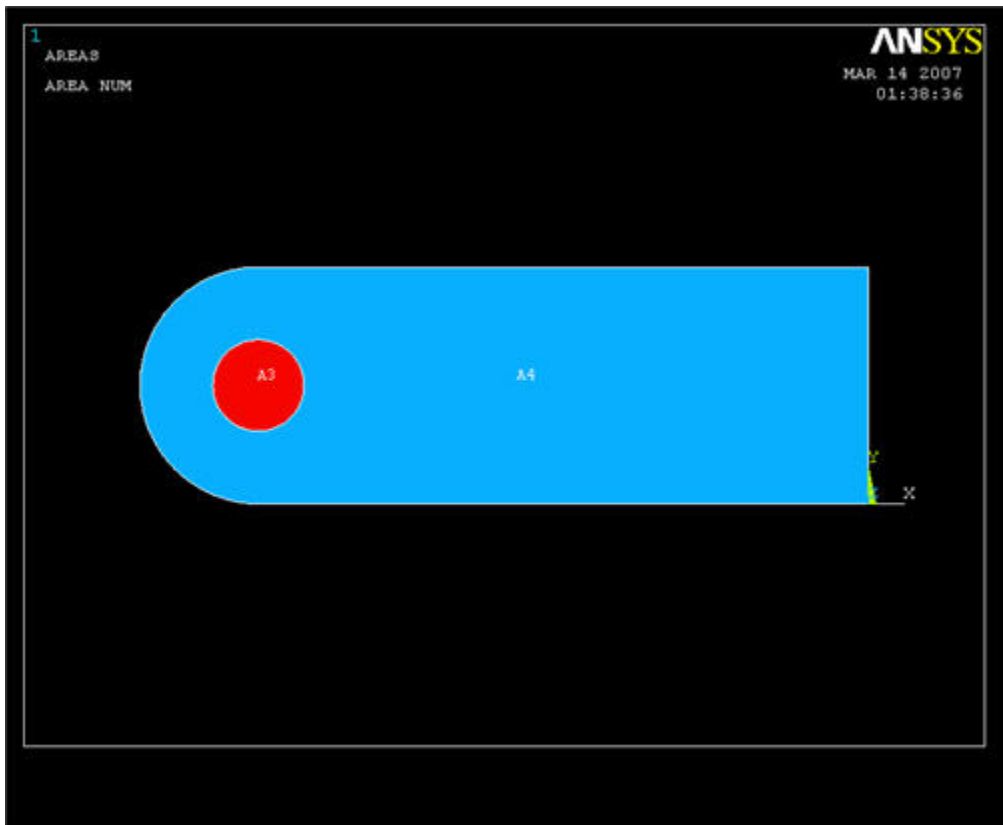


Subtract Hole Area

Now we create the hole by subtracting the round area from the rest of the crank.

Main Menu > Preprocessor > Modeling > Operate > Booleans > Subtract > Areas

First pick the body of the crank and click OK. Then pick the hole, and click OK again. The result is shown below.

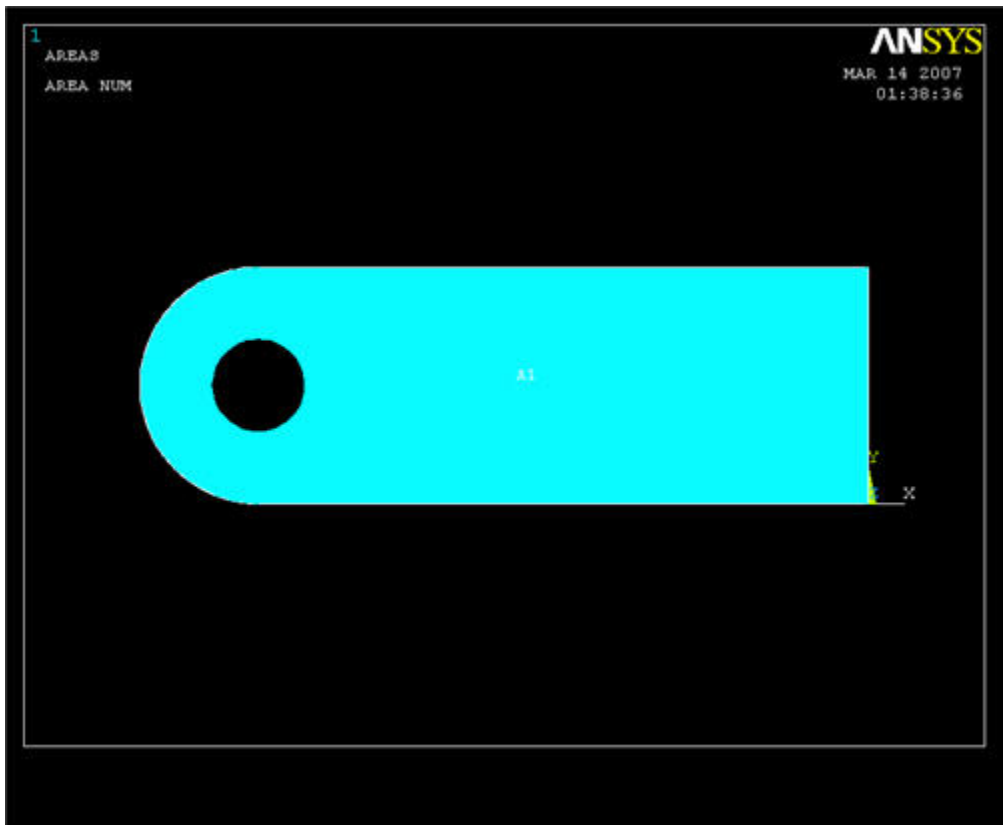

Reflecting the Area

To create the other half of the crank, we will reflect the current area about the Y-Z plane.

Main Menu > Preprocessor > Modeling > Reflect > Areas

Click on Pick All. The Y-Z plane is selected by default, so click OK. All that's left now is to add the two halves of the crank together.

Main Menu > Preprocessor > Modeling > Operate > Booleans > Add > Areas


Click on Pick All. The result is shown below.

Creating Keypoints for the Cut-out Region

Since the material to be removed in the middle of the crank is an irregular shape, we will define some keypoints in order to create and subtract this area.

Main Menu > Preprocessor > Modeling > Create > Keypoints > In Active CS

Enter the values shown below and click Apply. Leave the keypoint number blank to let ANSYS automatically assign an ID number. Alternatively, you may specify your own number (as long as that keypoint isn't already taken). To see a list of existing keypoints, go to Utility Menu > List > Keypoint > Coordinates Only. The Z location is left blank because it is 0 by default.

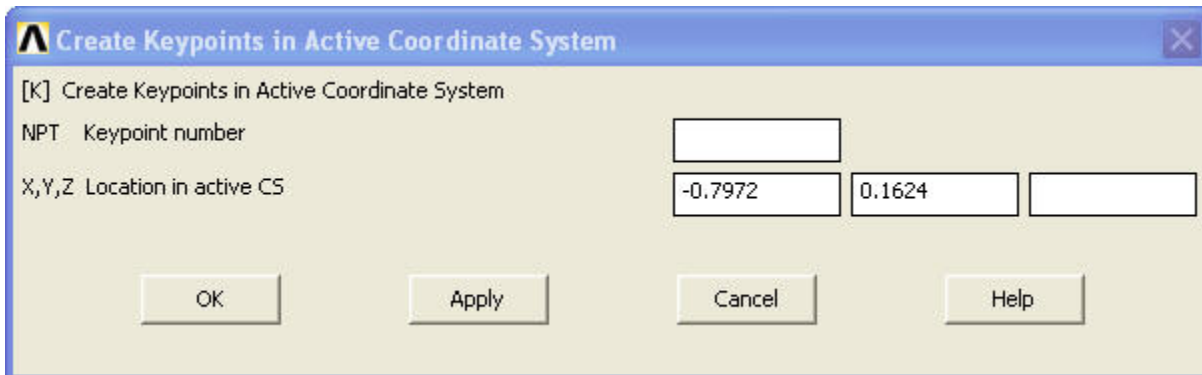


Continue adding the following points:

(0.7972, 0.3248)

(0.7972, 0.9744)

(-0.7972, 1.1368)

The result:

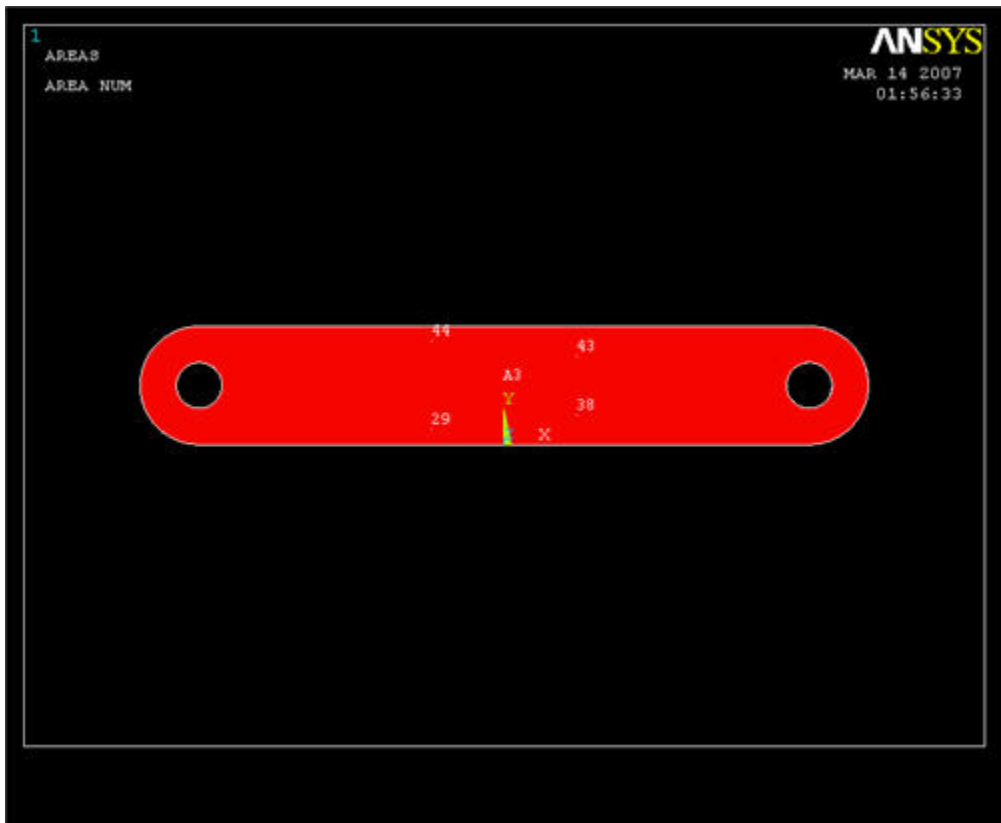

Creating Lines and Fillets from Keypoints

Main Menu > Preprocessor > Modeling > Create > Lines > Lines > Straight Line

Select pairs of points by clicking on beginning and end keypoints. You will notice that after clicking on the first point, ANSYS will predict where you want the line to be drawn to. Select four lines to form a quadrilateral at the center of the crank, then click OK.

Don't panic if all the lines disappear. In the current view, only areas are displayed. Switch to line view by:

Utility Menu > Plot > Lines

The result:



Next, we want to fillet the corners, as specified in the drawing. You can zoom in and out by using the mouse wheel or clicking on the appropriate buttons on the right toolbar (magnifying glass with + or -).

Main Menu > Preprocessor > Modeling > Create > Lines > Line Fillet

Pick two lines that meet at a corner where you want to put a fillet, then click OK. Enter a fillet radius of 0.177, and click Apply. Repeat for the other three corners of the quadrilateral. Compare results with image below.



Finishing the Crank Face

All that's left now is to create a new area from the filleted quadrilateral region, and then subtract it from the rest of the crank face.

Main Menu > Preprocessor > Modeling > Create > Areas > Arbitrary > By Lines

In the Pick window, select Loop. Click on any of the line segments that we have just created and the entire cutout region should be selected. Click OK. Switch back to area view by going to

Utility Menu > Plot > Areas

Subtract out the new area from the rest of the crank by the same procedure as before.

Main Menu > Preprocessor > Modeling > Operate > Booleans > Subtract > Areas

Select the rest of the crank face, then OK. It will be helpful to hold down the left mouse-button while picking an area, as an area changes color when it is selected. Move the pointer until the desired area is highlighted, then release the button. Finally, select the new cut-out area, then OK again. The result:



Creating the Volume


We will now make the face 3-D by extruding it by a given offset distance, similar to modeling in CAD.

Main Menu > Preprocessor > Modeling > Operate > Extrude > Areas > By XYZ Offset

Click Pick All. In the following window, change the DZ offset to 0.5. Click OK. To see your finished work, go to

Utility Menu > Plot > Volumes

Then click on the isometric view button on the right toolbar.

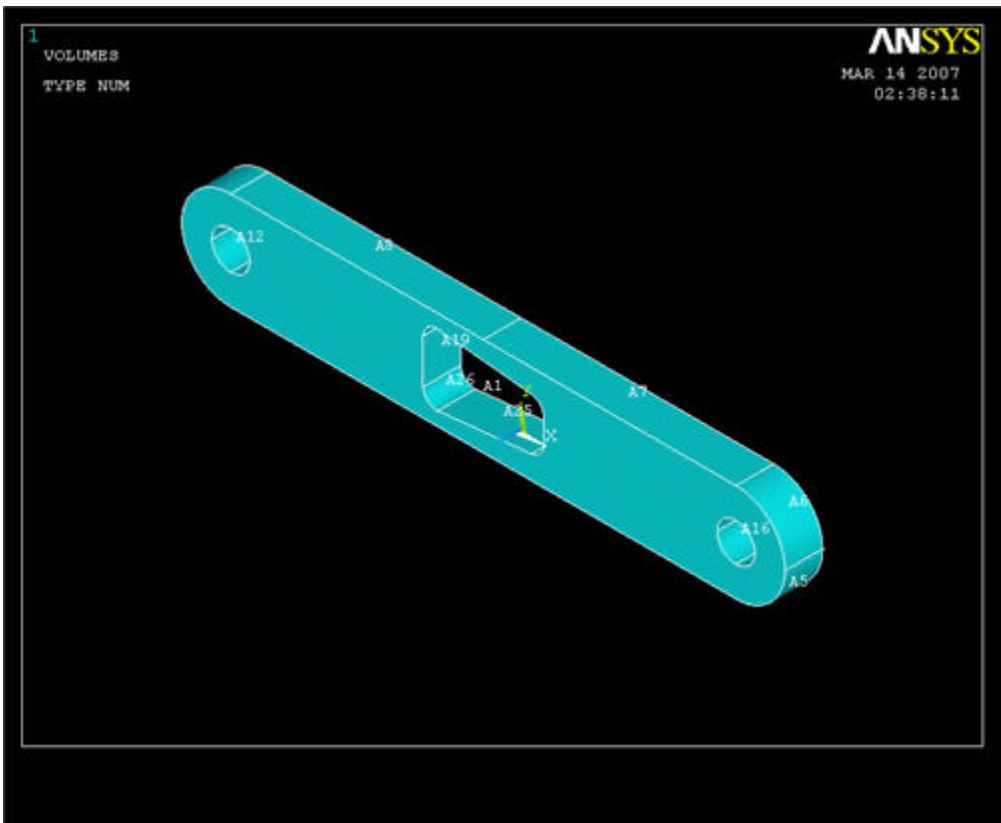

Creating the Pedal Shaft

Main Menu > Preprocessor > Modeling > Create > Volumes > Cylinder > Solid Cylinder

Enter the following values and press OK.

Solid Cylinder

☒ Pick
☐ Unpick

WP X

=

Y

=

Global X

=

Y

=

Z

=

WP X

3.3465

WP Y

.6495

Radius

.25

Depth

2.645

OK

Apply

Reset

Cancel

Help


We must now glue the shaft to the crank. The reason for using "glue" instead of performing a boolean add on the volumes is to maintain two discrete parts. This provides more flexibility in modeling, as it can allow for different materials and meshes. Note: If glue is not used, the two pieces will be independent of each other and the solution will be incorrect.

Main Menu > Preprocessor > Modeling > Operate > Booleans > Glue > Volumes

Click Pick All to glue our two volumes together. Note that there are no visual indicators of whether or not the volumes have been glued. You should check the Command Window and look for the "GLUE VOLUMES" command.

```
GLUE VOLUMES
INPUT VOLUMES =      1      2
INPUT VOLUMES WILL BE DELETED IF POSSIBLE
OUTPUT VOLUMES =      1      3
```

Your complete crank model should now look like this:

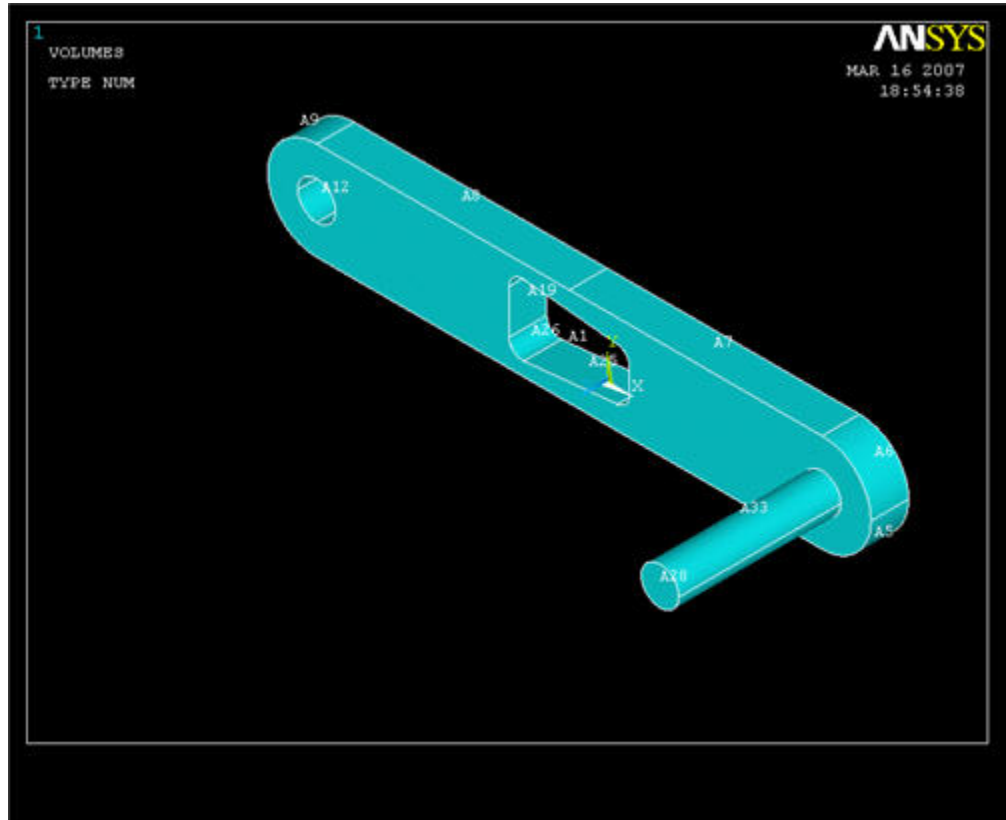

Save Your Work

Toolbar > SAVE_DB